SAMSUNG

Washing Machine
Owner's Instructions

WD7704C8(W/V/C/S/R)
WD7702C8(W/V/C/S/R)

Register your product at
www.samsung.com/global/register

Code No.: DC68-02410U_EN

WD7704C8S-02410U_EN.indd 1 2008-04-17 ¿ÀÀü 11:31:52

WD7704C8S-02410U_EN.indd 2 2008-04-17 ¿ÀÀü 11:31:52

Features

1. Silver Wash(Ag^+)
Samsung's silver Nano feature uses silver nano particles to sanitize and disinfect your laundry and your machine's drum. Delicates as well as smelly socks will get odor-free from human sweat at temperature as low as 30˚C. That saves energy and protects color and shape of your clothes.

2. Child Lock
The Child Lock function keeps curious little hands out of the washer. This safety feature ensures, that children do not toy with the operation of the washer. It also alerts you when it is activated.

3. Delay Start
This function enables uses to delay the washing machine's starting time for up to 24 hours.

4. Less Ironing
Less ironing is needed as Samsung's Carefreewash safely cleans your soft, delicate cloths and easy-care fabrics. Developed by Samsung's globally recognized digital process technology, the Less Iron function is a specialized laundry program that will help to reduce wrinkles on your delicate garments, freeing up the time you would have spent on ironing.

5. Delicate & Wool Program
Special care can be determined by the appropriate temperature, the gentle wash action and the appropriate amount of water.

6. Air Wash
The Air Wash system deodorizes unpleasant smells and sterilizes 'bacteria' and mites in the laundry that cannot be eliminated through a conventional washing system, a benefit of its unique air-washing mechanism.
- Air-washable : Woolen coats, cotton/down jumpers, sweaters, suits, pillows, cushions, needlework dolls
- Not applicable : leather, silk, velvet, electric blankets, other dirty laundry

WD7704C8S-02410U_EN.indd 3 2008-04-17 ¿ÀÀü 11:31:52

Safety Precautions

Congratulations on your purchase of this Samsung washing machine. These Owner's Instructions contain valuable information on the installation, use, and care of this appliance. Please take the time to read these instructions so that you can take full advantage of the washing machine's features and enjoy this appliance for many years to come.

Before using the appliance

- Packing materials can be dangerous to children; keep all packing material (plastic bags, polystyrene, etc.) well out of the reach of children.
- The appliance is designed for home use only.
- Make sure that water and electrical connections are made by qualified technicians, observing the manufacturer's instructions (see "Installing the Washing Machine") and local safety regulations.
- All packaging and shipping bolts must be removed before the appliance is used. Serious damage may occur if they are not removed. See "Removing the shipping bolts".
- Before washing clothes for the first time, you must run a complete cycle without clothes. See "Washing for the first time".

Safety instructions

- Before cleaning or carrying out maintenance, unplug the appliance from the electrical outlet or set the ⏻ (On/Off) button to Off.
- Make sure that the pockets of all clothing to be washed are empty. Hard, sharp objects, such as coins, safety pins, nails, screws, or stones can cause extensive damage to the appliance.
- Always unplug the appliance and turn off the water after use.
- Before you open the door of the appliance, check that the water has drained. Do not open the door if you can still see water.
- Pets and small children may climb into the appliance. Check the appliance before each use.
- The glass door becomes very hot during the washing cycle. Keep children away from the appliance while it is in use.
- Do not attempt to repair the appliance yourself. Repairs made by inexperienced or unqualified persons may cause injury and/or make more serious repairs to the appliance necessary.
- If the plug (power supply cord) is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- This appliance should only be serviced by an authorized service center, and only genuine spare parts should be used.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely. Young children should be supervised to ensure that they do not play with the appliance.
- If this appliance is supplied from a cord extension set or an electrical portable outlet device, the cord extension set or electrical portable outlet device must be positioned so that it is not subject to splashing or ingress of moisture. Additionally, the cord extension set or electrical portable out let device must be of a current rating suitable for the appliance.
- This appliance has to be connected to the plug endurable to proper power consumption.
- This appliance has to be positioned so that the plug is accessible after installation.
- Do not use processed water containing oil, cream or lotion, which is usually found in skin-care shops or massage clinics.
  - Otherwise this will cause the packing to be deformed, which causes a malfunction or water leak.
- A stainless washing tube does not usually rust. However if some metal such as a hair pin is left in the tube for an extended time, the tube could rust.
  - Do not leave water or bleach containing chlorine in the tube for an extended period of time.
  - Do not regularly use or leave water containing iron in the tube for an extended period of time.

  If rust starts appearing on the surface of the tube, apply a cleansing agent (neutral) to the surface and use a sponge or soft cloth to clean it. (Under no circumstances use a metal brush)
- For washing machines with ventilation openings in the base, that a carpet must not obstruct the openings.
- Use the new hose-sets and old hose-sets should not be reused.
- The dryer is not to be used if chemicals have been used for cleaning.

SAVE THESE INSTRUCTIONS

Table of Contents

Safety Precautions . . . . . **inside cover**

Installing the Washing Machine. **A-1**
- Unpacking the washing machine A-1
- Overview of the washing machine A-1
- Selecting a location. A-2
- Adjusting the leveling feet A-2
- Removing the shipping bolts A-2
- Connecting the water supply hose A-3
- Positioning the drain hose A-4

Washing a Load of Laundry **B-1**
- Overview of the control panel B-1
- Washing clothes using Fuzzy Logic B-3
- Washing clothes manually B-4
- Using Airwash options B-4
- Using delay start. B-5
- Drying a load of Laundry B-5
- Washing for the first time. B-5
- Putting detergent in the washing machine B-5
- Washing tips and hints B-6

Maintaining the Washing Machine **C-1**
- Draining the washing machine in an emergency C-1
- Repairing a frozen washing machine. C-1
- Cleaning the exterior C-1
- Cleaning the detergent drawer and recess C-2
- Cleaning the debris filter C-2
- Cleaning the water hose mesh filter C-3

Troubleshooting **D-1**
- Problems and solutions D-1
- Understanding error messages. D-1

Programme Chart **E-1**

Appendix **F-1**
- Fabric care chart F-1
- Electrical warnings F-1
- Protecting the environment F-2
- Declaration of conformity F-2
- Specification F-2

WD7704C8S-02410U_EN.indd 5 2008-04-17 ¿ÀÀü 11:31:53

Unpacking the washing machine

Unpack your washing machine and inspect it for shipping damage. Also make sure that you have received all of the items shown below. If the washing machine was damaged during shipping or you do not have all of the items, contact your Samsung dealer immediately.

Overview of the washing machine

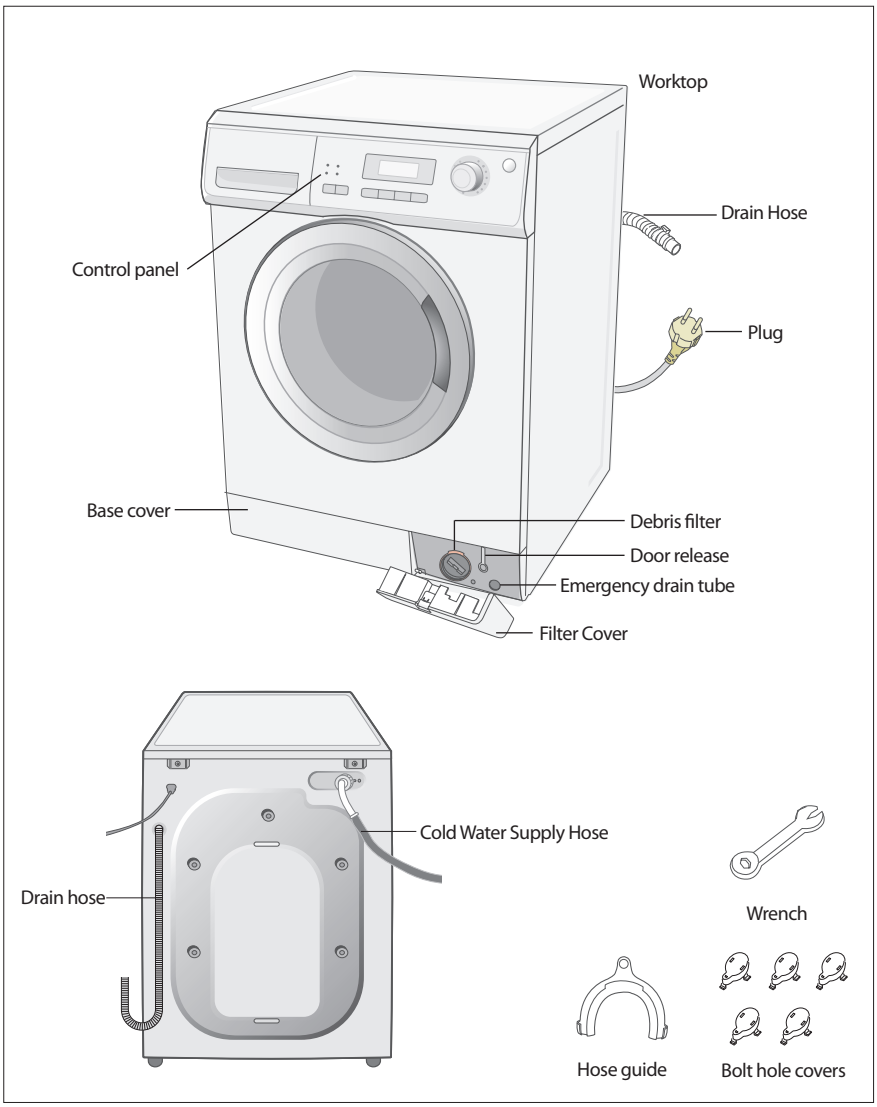

WD7704C8S-02410U_EN.indd 1 2008-04-17 ¿ÀÀü 11:31:56

Selecting a location

Before you install the washing machine, select a location with the following characteristics:

- A hard, level surface (if the surface is uneven, see "Adjusting the leveling feet," below)
- Away from direct sunlight.
- Adequate ventilation
- Room temperature that will not fall below 0 ˚C
- Away from sources of heat such as coal or gas

Make sure that the washing machine does not stand on its power cord.
Ventilation openings must not be obstructed by carpeting when the washing machine is installed on a carpeted floor.

Adjusting the leveling feet

If the floor is uneven, adjust the feet (do not insert pieces of wood or any other objects under the feet):

1. Loosen the leg bolt by turning it with your hand until it is at the desired height.
2. Tighten the locking nut by turning it with the supplied wrench.

If the washer is placed on an uneven or weak surface, noise or vibration occurs.
(Only l degree angle is allowed.)

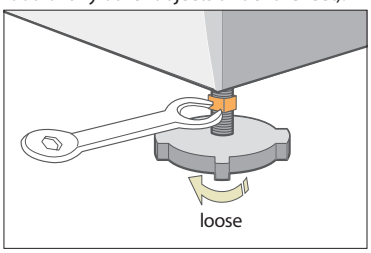

Removing the shipping bolts

Before using the washing machine, you must remove the five shipping bolts from the back of the unit.
To remove the bolts:

1. Loosen all bolts with the supplied wrench before removing them.
2. Take each bolt head and pull it through the wide part of the hole.
   Repeat for each bolt.
3. Fill the holes with the supplied plastic covers.
4. Keep the shipping bolts for future use.

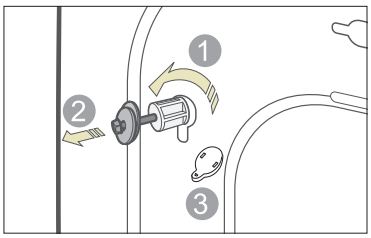

WD7704C8S-02410U_EN.indd 2 2008-04-17 ¿ÀÀü 11:31:57

Connecting the water supply hose

The water supply hose must be connected to the washing machine at one end and to the water faucet at the other. Do not stretch the water supply hose. If the hose is too short replace the hose with a longer, high pressure hose.

To connect the water supply hose:

1. Take the L-shaped arm fitting for the cold water supply hose and connect to the cold water supply intake on the back of the machine. Tighten by hand.
2. Connect the other end of the cold water supply hose to your sink's cold water faucet and tighten it by hand. If necessary, you can reposition the water supply hose at the washing machine end by loosening the fitting,rotating the hose, and retightening the fitting.

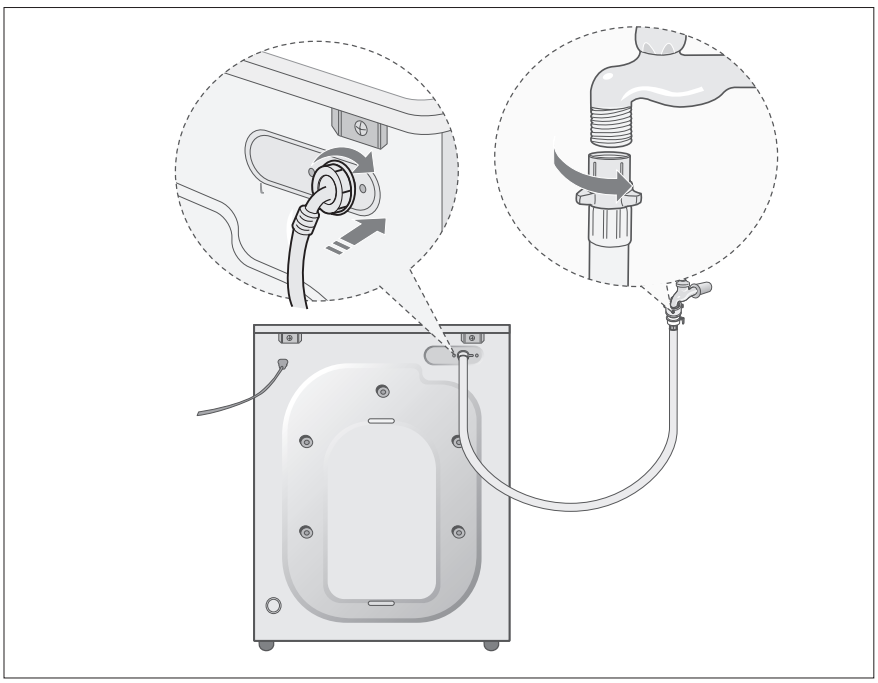

Option:

1. Take the red L-shaped arm fitting for the hot water supply hose and connect to the red hot water supply intake on the back of the machine. Tighten by hand.
2. Connect the other end of the hot water supply hose to your sink's hot water faucet and tighten it by hand.
3. Use a Y-piece if you only want to use cold water.

WD7704C8S-02410U_EN.indd 3 2008-04-17 ¿ÀÀü 11:31:58

Connecting the water supply hose (Option)

1. Remove the adaptor from the water supply hose.

2. First, using a '+' type screw driver, loosen the four screws on the adaptor. Next, take the adaptor and turn part(b) following the arrow until there is a 5mm gap.

3. Connect adaptor to the water tap by tightening the screws firmly. Then, turn part (b) following the arrow and put(a) and (b) together.



4. Connect the water supply hose to the adaptor. Pull down part (c) of the water supply hose.
When you release part (c) the hose automatically connects to the adaptor making a 'click' sound.

5. Connect the other end of the water supply hose to the inlet water valve at the rear of the washer. Screw the hose clockwise all the way in.

NOTICE After completing connection, if water leaks from the hose, then repeat the same steps. Use the most conventional type of faucet for water supply. In case the faucet is square or too big, remove the spacing ring before inserting the faucet into the adaptor.

Positioning the drain hose

The end of the drain hose may be positioned in three ways:

Over the edge of a wash basin.

The drain hose must be placed at a height of between 60 and 90 cm. To keep the drain hose spout bent, use the supplied plastic hose guide. Secure the guide to the wall with a hook or to the faucet with a piece of string to prevent the drain hose from moving.

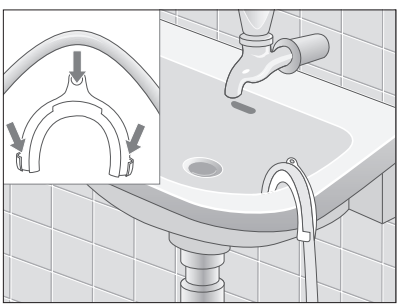

In a sink drain pipe branch

The drain pipe branch must be above the sink siphon so that the end of the hose is at least 60 cm above the ground.

In a drain pipe

Samsung recommends that you use a 65 cm high vertical pipe; it must be no shorter than 60 cm and no longer than 90 cm.

WD7704C8S-02410U_EN.indd 4 2008-04-17 ¿ÀÀü 11:32:01

Washing a Load of Laundry

Overview of the control panel

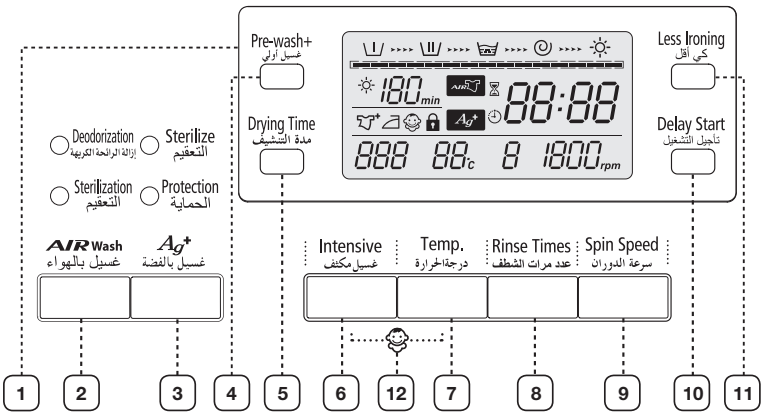

1. **Digital graphic display**
   Displays the remaining wash cycle time,all of washing information and error messages.
2. **Air Wash selection button**
   Press the button repeatedly to cycle through the Deodorise and Air-Disinfect functions.
   When the Air Wash function is selected, other cycles can no longer be used.
   Deodorise : Removes bad smells from the laundry
   Air-Disinfect : Eliminates bacteria and mites from the laundry
3. **Silver Wash selection button(Ag^+)**
   Silver Nano water is supplied in washing as well as the last rinse, featuring Air-Disinfect and antibacterial coating. (You can select 'Air-Disinfect' or 'Protect', 'Air-Disinfect' + 'Protect'.)
4. **Pre-wash+ selection button**
   Press the button to select pre-wash. Pre-wash is available only with Cotton, Coloureds, Synthetics, Heavy Soil.
5. **Drying Time selection button**
   Drying course can last up to 190min. When selecting drying only, drying course will start after spinning . (The spinning time is about 15~17 min.) If you wish to go through from washing to drying, select the course you want by turning the course selection dial and then push the Drying Time button. For dry cycle, you can select the time only but you cannot select temperature and rotation speed. Because no hot air or moisture is drained during dry cycle, no moisture or condensation develops on the walls and ceiling of your washing room. (130min. → 90min. → 60min. → 30min.)
   If the load doesn't dry enough as you expected, please try additional drying for 30~90 minutes at your disposal.
6. **Intensive selection button**
   When selected, the washing power increases. This function can be selected for the Cotton, Coloreds, Synthetics, Jeans, Heavy Soil, Mixed Load, and Calm Wash courses. Pressing this button toggles between On and Off.
7. **Temperature selection button**
   Press the button repeatedly to cycle through the available water temperature options. (cold(0˚C), 30˚C, 40˚C, 60˚C and 95˚C)
   The default temperature varies depending on the cycle. You can also choose a particular laundry temperature from the preset temperature options.
8. **Rinse selection button**
   Press the rinse button to add rinse cycles. Maximum number of rinse cycles is five.

WD7704C8S-02410U_EN.indd 1 2008-04-17 ¿ÀÀü 11:32:03

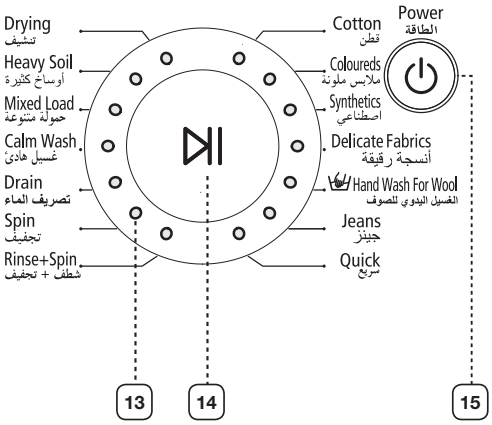

9. Spin selection button

Press the button repeatedly to cycle through the available spin speed options.

WD7704C8	Rinse hold, No spin(0), 400, 800, 1400rpm
WD7702C8	Rinse hold, No spin(0), 400, 800, 1200rpm

0 : no spin Non display : Rinse hold

10. Delay Start selection button

Press the button repeatedly to cycle through the available delayed start options (from 3 hour to 19 hours in one hour increments).
Displayed hours means the time of finished washing-cycle.

11. Less Ironing selection button

Less Ironing will reduce wrinkles and ironing time. (available course: Cotton, Coloureds, Synthetics, Handwash, Quick, Heavy Soil, Mixed Load, Bedding, Rinse + Spin, Spin)

12. Child Lock selection button

This is a button for preventing children from manipulating the washing machine.
On/Off - To set the program on: Press the Start/Pause button to turn on the washing machine. Press and hold down the [My Favourite] + [Temp] button for 2-3 seconds. It can only be activated when the machine is turned on. Once you set the Child Lock on while in washing, no button is activated until you set if off. Even the POWER button will not be activated. The Child Lock lamp lights on.
To set the program off: Press and hold down the [My Favourite] + [Temp] button again for 2-3 seconds, then the lamp lights off and is set off.

NOTE : Check out the Child Lock button first when no button is activated while the washing machine is working.

13. Fuzzy Control dial

Turn the dial to select one of the 14 available wash programs

Cotton, Coloureds, Synthetics, Delicate, Wool, Handwash, Quick, Drying, Heavy Soil, Mixed Load, Bedding, Drain, Spin, Rinse+Spin

14. Start/Pause selection button

Press the Start/Pause button to pause or restart a cycle. If you want to change the washing cycle while a cycle is running, press this button to pause the currently running cycle, and press it again to restart the washing machine after choosing a different cycle.

15. ⏻ (On/Off) selection button

Press once to turn the washing machine on, press again to turn the washing machine off. If the washing machine power is left on for longer than 10 minutes without any buttons being touched, the power automatically turns off.

WD7704C8S-02410U_EN.indd 2 2008-04-17 ¿ÀÀü 11:32:05

Washing clothes using Fuzzy Logic

Your new washing machine makes washing clothes easy, using Samsung's "Fuzzy Logic" automatic control system. When you select a wash programme, the machine will set the correct temperature, washing time, and washing speed.

To wash clothes using the Fuzzy Logic programs:

1. Turn on your sink's water faucet.
2. Press the ⏻ (On/Off) button.
3. Open the door.
4. Load the articles one at a time loosely into the drum, without overfilling.
5. Close the door.
6. Add the detergent, softener, and prewash detergent (if necessary) into the appropriate compartment.
7. Turn the Fuzzy Control dial to select the appropriate program for the type of clothes Cotton, Coloureds, Synthetics, Delicate, Wool, Handwash, Quick, Drying, Heavy Soil, Mixed Load, Bedding, Drain, Spin, Rinse+Spin.

   You will see the indicators light up on the control panel.

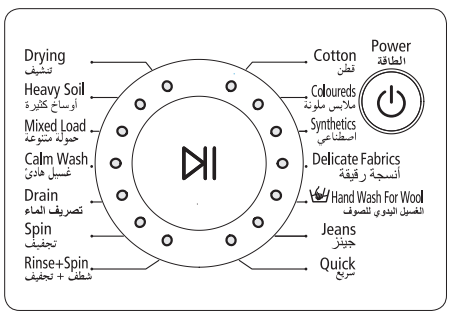

8. At this time, you can control the wash temperature, rinsing times, spin speed, delay time by pressing the appropriate option button.
9. Press the Start/Pause button on the Fuzzy Control dial and the wash cycle will begin. The process indicator will light up and the remaining time for the cycle will appear in the display.

Pause Option (Stop & Adding laundry Function)

Within 5 minutes from start, it is possible to put in the laundry or take out.
If push Start/Pause button, the door is unlocked immediately.
In case of too hot or too much water in washer, the door can not be opened.
After closed the door, one more push Start/Pause button to make washing process going on continuously.

When the cycle is finished:

After the total cycle has finished,the power will turn off automatically.

1. Open the door.
2. Remove laundry.

WD7704C8S-02410U_EN.indd 3 2008-04-17 ¿ÀÀü 11:32:08

Washing clothes manually

You can wash clothes manually without using the Fuzzy Logic feature.

To do so:

1. Turn the water supply on.
2. Press the ⏻ (On/Off) button on the washing machine.
3. Open the door.
4. Load the articles one at a time loosely into the drum, without overfilling.
5. Close the door.
6. Put the detergent and, if necessary, softener or prewash detergent, in the appropriate compartments.
7. Press the Temperature button to select the temperature. (cold(0˚C), 30˚C, 40˚C, 60˚C and 95˚C)
8. Press to rinse button to select the required number of rinse cycles. Maximum number of rinse cycles is five. The washing duration will be prolonged accordingly.
9. Press the Spin button to select the spin speed. [0, 400, 800, 1200 or 1400 revolutions per minute(rpm)]
   Notice: The rinse hold program allows you to take clothes that are dripping wet out of the washing machine.
   0 : No spin , Non display : Rinse hold
10. Press the button repeatedly to cycle through the available delayed start options (from 3 hour to 19 hours in one hour increments). Displayed hours means the time of finished washing-cycle.
11. Press the Start/Pause button and the machine will begin the cycle.

Using Airwash options

The air system deodorises and sanitises your clothes and reduces wrinkles on them with smooth air washing.

Examples of when Airwash is needed

1. A suit that's starting to get a bit smelly
2. A woolen jumper that's been sitting in the back of your closet since last winter and is now getting musty

Advantages of Air wash

1. Saves your water, energy, detergent and ironing time.
2. Effective in sanitising the items that cannot be washed in common way. (pillows, cushions, teddy bears, etc.)
   - Removes 99% of bacteria from these items to remove allergens.

Air wash cycle (Deodorisation,Sterilisation)

1. Open the door and insert your laundry. Then close the door.
2. Push the Power button.
3. Turn the course selection dial and select the Air wash course (Deodorisation, Sterilisation).
   - When the Airwash course is selected, you cannot select other functions additionally.
4. Close the door and push the Start/Pause button.
   - Water is supplied and drained continually during each cycle.
   When each cycle finishes, the drum rotates for about 30 minutes to tumble the laundry. You can stop your washing machine and take out your laundry at any time during the tumbling.

Available laundry

- Wool coat, jumpers with cotton and goose feathers, sweaters, suits, and bedding (two items or less)

Clothes for which you should not perform deodorisation

- Leathers, minks, furs, natural silks, velvets, etc that can be damaged by the deodorisation process
- For underwear with much laces, dolls using glues, cushions and suits, glues may become apart due to heat.
- Be careful of clothes with studs because they may be broken.
- For starched clothes, they may become less stiff and have a deformation.
- Dirty outer garments may be damaged because dirties may become stiff.

Clothes for which you should not perform sterilisation

- Hard bedding such as a wooden pillow
- Pillows and bedclothes filled with grains or plastics instead cotton
- Electric blankets
- Wool bedclothes that unhair much and generate a lot of dust

You must not use the air wash course for beddings filled with sponges or styrofoam.
A fire may outbreak on the sponges or styrofoam and cause damage to the product.

WD7704C8S-02410U_EN.indd 4 2008-04-17 ¿ÀÀü 11:32:09

Using delay start

You can set the washing machine to finish your wash automatically at a later time, choosing from 3 to 19 hour delay (in 1 hour increments). Displayed hours means the time of finished washing-cycle.

To do this:

1. Manually or automatically set your washing machine for the type of clothes you are washing.
2. Press the Delay Start button repeatedly until the delay time is set.
3. Press the Start/Pause button. The Delay Start indicator will light, and the clock will begin counting down until it reaches your finish time.
4. To cancel Delay Start, press the ⏻ (On/Off) button, then turn the washing machine on again.

Drying a load of Laundry

Drying heater heat air to proper temperature and blow through laundry. Then, High and drying air absorb moisture and go into condensing duct which is low temperature environment. So high temperature, moisture air change low temperature and moisture condensed to water. the water is pumped to outside of washing machine.

Washing for the first time

Before washing clothes for the first time, you must run a complete cycle without clothes.
To do this:

1. Press the ⏻ (On/Off) button.
2. Pour a little detergent into compartment (Ⅱ) in the detergent drawer.
3. Turn on the water supply to the washing machine.
4. Press the Temperature button repeatedly until 40 ˚C is displayed.
5. Press the Start/Pause button.

- This will remove any water from the manufacturer's test run remaining in the machine.

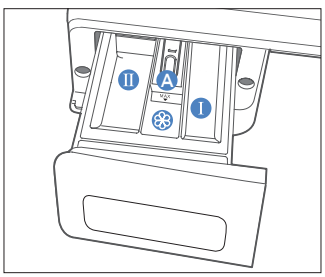

Dispenser Ⅰ : Detergent for prewash or starch.
Dispenser Ⅱ : Detergent for main wash, water softener,pre-soaking agent, bleach and stain removal product.
Dispenser ❀ : Additives,e.g.fabric softener or former (fill no higher than lower edge of insert " A")

Putting detergent in the washing machine

1. Pull out the detergent drawer.
2. Add laundry detergent into compartment (Ⅱ).
3. Add softener into compartment (❀) (if you desire).
4. Add prewash detergent into compartment (Ⅰ) (if you desire).

Caution :
Concentrated or thick fabric softener and conditioner must be diluted with a little water before being poured into the dispenser (prevents the overflow from becoming blocked.

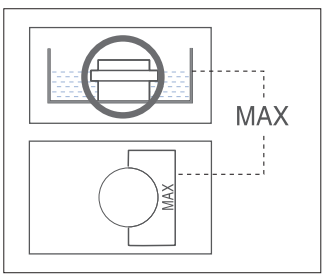

WD7704C8S-02410U_EN.indd 5 2008-04-17 ¿ÀÀü 11:32:13

Washing tips and hints

Sorting your laundry: Sort your laundry according to the following characteristics:

- **Type of fabric care label symbol:** Sort laundry into cottons, mixed fibres, synthetics, silks, wools and rayon.
- **Colour:** Divide whites and colours. Wash new, coloured items separately.
- **Size:** Placing items of different sizes in the same load will improve the washing action.
- **Sensitivity:** Wash delicate items separately, using the Delicate wash programme for pure new wool, curtains and silk articles. Check the labels on the items you are washing or refer to the fabric care chart in the appendix.

Emptying pockets: Coins, safety pins and similar items can damage linen, the washing machine drum, and the water tank.

Securing fasteners: Close zippers and fasten buttons or hooks; loose belts or ribbons should be tied together.

Prewashing cotton: Your new washing machine, combined with modern detergents, will give perfect washing results, thus saving energy, time, water and detergent. However, if your cotton is particularly dirty, use a prewash with a protein-based detergent.

Determining load capacity: Do not overload the washing machine or your laundry may not wash properly. Use the chart below to determine the load capacity for the type of laundry you are washing.

Fabric Type	Load Capacity
Cotton/Coloureds	7.5 kg
Synthetics	4.0 kg
Delicate	2.5 kg
Wool	2.0 kg

Detergent tips: The type of detergent you should use is based on the type of fabric (cotton, synthetics, delicates items, Wool), colour, wash temperature, degree and type of soiling.
Always use "low suds" laundry soap, which is designed for automatic washing machines.
Follow the detergent manufacturer's recommendations based upon the weight of the laundry, the degree of soiling, and the hardness of the water in your area. If you do not know how hard your water is, ask your water authority.

Notice : Keep detergents and additives in a safe, dry place out of the reach of children.

WD7704C8S-02410U_EN.indd 6 2008-04-17 ¿ÀÀü 11:32:13

Draining the washing machine in an emergency

1. Unplug the washing machine from the power supply.
2. Open the filter-cover by using a coin or a key.

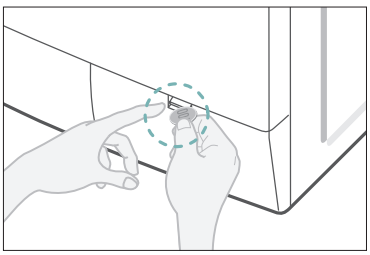

3. Unscrew the emergency drain cap by turning left. Grip the cap on the end of the emergency drain tube and slowly pull it out about 15 cm.

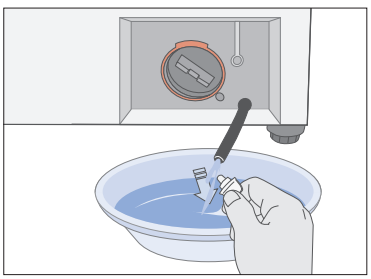

4. Allow all the water to flow into a bowl.
5. Reinsert the drain tube and screw the cap back on.
6. Replace the filter-cover.

Repairing a frozen washing machine

If the temperature drops below freezing and your washing machine is frozen:

1. Unplug the washing machine.
2. Pour warm water on the source faucet to loosen the water supply hose.
3. Remove the water supply hose and soak it in warm water.
4. Pour warm water into the washing machine drum and let it sit for 10 minutes.
5. Reconnect the water supply hose to the water faucet and check if the water supply and drain operations are normal.

Cleaning the exterior

1. Wipe the washing machine surfaces, including the control panel, with a soft cloth and non-abrasive household detergents.
2. Use a soft cloth to dry the surfaces.
3. Do not pour water on the washing machine.

WD7704C8S-02410U_EN.indd 1 2008-04-17 ¿ÀÀü 11:32:15

Cleaning the detergent drawer and recess

1. Press the release lever on the inside of the detergent drawer and pull it out.
2. Remove the cap from compartment ( ).
3. Wash all of the parts under running water.
4. Clean the drawer recess with an old toothbrush.
5. Reinsert the cap (Pushing it firmly into place) and replace the liquid detergent divider into the drawer.
6. Push the drawer back into place.
7. Run a rinse programme without any laundry in the drum.

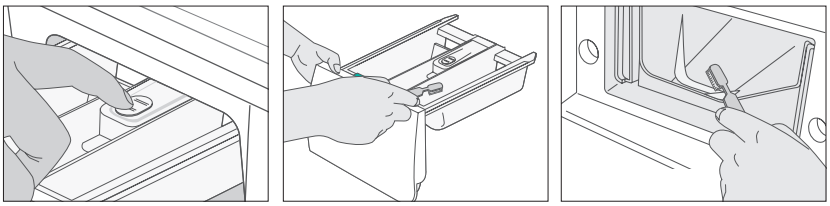

Cleaning the debris filter

Clean the debris filter 5 or 6 times a year, or when you see the following error message on the display:

1. Open the filter-cover, See "Draining the washing machine in an emergency" on page C-1.
2. Unscrew emergency drain cap by turning left and drain off all the water.
   See "Draining the washing machine in an emergency" on page C-1.
3. Unscrew the filter cap and take it out.
4. Wash any dirt or other material from the filter. Make sure the drain pump propeller behind the filter is not blocked. Replace the filter cap.

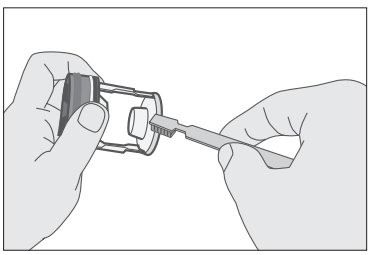

5. Replace the filter-cover.

WD7704C8S-02410U_EN.indd 2 2008-04-17 ¿ÀÀü 11:32:22

Cleaning the water hose mesh filter

You should clean the water hose mesh filter at least one time per year, or when you see the following error message on the display:

To do this:

1. Turn off the water source to the washing machine.
2. Unscrew the hose from the back of the washing machine.
3. With a pair of pliers, gently pull out the mesh filter from the end of the hose and rinse it under water until clean. Also clean the inside and outside of the threaded connector.

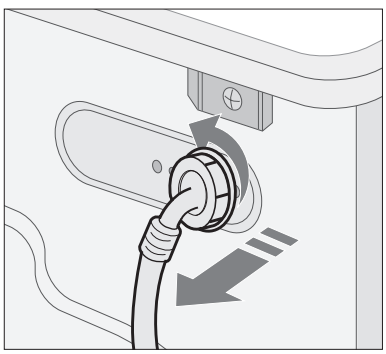

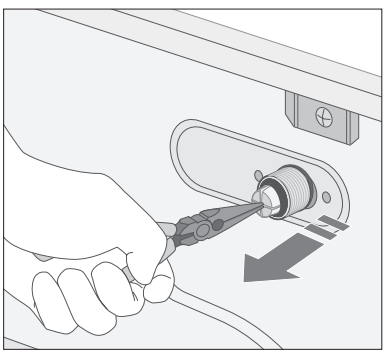

4. Push the filter back into place.
5. Screw the hose back onto the washing machine.
6. Turn on the faucet and make sure the connections are watertight.

WD7704C8S-02410U_EN.indd 3 2008-04-17 ¿ÀÀü 11:32:24

Problems and solutions

The washing machine will not start

- Make sure the door is firmly closed.
- Make sure the washing machine is plugged in.
- Make sure the water source faucet is turned on.
- Make sure to press the Start/Pause button.

No water or insufficient water supply

- Make sure the water source faucet is turned on.
- Make sure the water source hose is not frozen.
- Make sure the water intake hose is not bent.
- Make sure the filter on the water intake hose is not clogged.

Detergent remains in the detergent drawer after the wash programme is complete

- Make sure the washing machine is running with sufficient water pressure.
- Put the detergents in the inner parts of the detergent drawer(away from the outside edges).

Washing machine vibrates or is too noisy

- Make sure the washing machine is set on a level surface. If the surface is not level, adjust the washing machine feet to level the appliance.
- Make sure that the shipping bolts are removed.
- Make sure the washing machine is not touching any other object.
- Make sure the laundry load is balanced.

The washing machine does not drain and/or spin

- Make sure the drain hose is not squashed or bent.
- Make sure the water hose mesh filter is not clogged.

The Door does not open

1. Disconnect the power plug from the power supply.
2. Remove the water from the washing machine.
3. Open the filter cover using a coin.
4. Locate the orange plastic tab and pull forward to open the door.

Understanding error messages

Error displayed	Solution
dE2	• Close the door.
4E	• Make sure the source water faucet is turned on. • Check the water pressure.
5E	• Clean the debris filter. • Make sure the drainage hose is installed correctly.
UE	• Laundry load is unbalanced; loosen any tangled laundry. If only one item of clothing needs washing, such as a bathrobe or Handwash, the final spin result might be unsatisfactory and an "UE" error message will be shown in the display window.
cE / 3E	• Call after-sales service.
HOT	• Displayed when the door does not open for high temperature.

Before contacting After-Sales service:

1. Try to remedy the problem (See "Troubleshooting" on this page).
2. Restart the programme to see if the fault is repeated.
3. If the malfunction persists, call after-sales service and describe the problem.

WD7704C8S-02410U_EN.indd 1 2008-04-17 ¿ÀÀü 11:32:24

Programme Chart

(∗ user option)

Programme	Max Load(kg)	Detergent and Additives			Temp. (˚C)	Spin Speed(Max) rpm		Delay start	Cycle Time (min)
	WD7704C8/ WD7702C8	prewash	wash	softener	max	WD7704C8	WD7702C8		
Cotton	7.5	∗	yes	∗	95	1400	1200	∗	145
Coloureds	7.5	∗	yes	∗	60	1400	1200	∗	97
Synthetics	4.0	∗	yes	∗	60	1200	1200	∗	69
Delicate	2.5	-	yes	∗	40	800	800	∗	52
Wool	2.0	-	yes	∗	40	800	800	∗	39
Handwash	2.0	-	yes	∗	40	400	400	∗	31
Quick	3.0	-	yes	∗	60	1400	1200	∗	27

Programme	Type of WASH
Cotton	Averagely or lightly soiled cottons, bed linen, table linen, underwear, towels, shirts,etc.
Coloureds	Averagely or lightly soiled cottons, bed linen, table linen, underwear, towels, shirts, etc.
Synthetics	Averagely or lightly soiled blouses, shirts, etc. Made of polyester (Diolen, Trevira), polyamide (perlon, Nylon) or other similar blends.
Delicate	Delicate curtains, dresses, skirts, shirts and blouses.
Wool	Only machine washable woolens with pure new wool label.
Quick	Lightly soiled cottons or linen blouses, shirts, dark coloured terry cloth, coloured linen articles, Handwash, etc.

1. The programme duration data has been measured under the conditions specified in Standard IEC 60456/ EN 60456.
2. Consumption in individual homes may differ from the values given in the table due to variations in the pressure and temperature of the water supply, the load and the type of laundry.

WD7704C8S-02410U_EN.indd 1 2008-04-17 ¿ÀÀü 11:32:25

Programme Chart

(∗ user option))

Programme	Max Load(kg)	Detergent and Additives			Temp. (˚C)	Spin Speed(Max) rpm		Delay start	Cycle Time (min)
	WD7704C8/ WD7702C8	prewash	wash	softener	max	WD7704C8	WD7702C8		
Drying	3.5	-	-	-	-	-	-	∗	190
Heavy Soil	7.5	∗	yes	∗	60	1400	1200	∗	108
Mixed Load	2.5	-	yes	∗	60	800	800	∗	75
Bedding	5.0	∗	yes	∗	95	1400	1200	∗	92

Programme	Type of WASH
Heavy Soil	Stained or heavily soiled cottons, bed linen, table linen, underwear, towels, shirts, Handwash, etc.
Mixed Load	A mix of lightly soiled cottons and synthetic fabrics.
Bedding	Cotton bedding, bed sheet, duvet cover, pillow cover etc.

WD7704C8S-02410U_EN.indd 2 2008-04-17 ¿ÀÀü 11:32:25

Appendix

Fabric care chart

Resistant material

Delicate fabric

Item may be washed at 95 ˚C

Item may be washed at 60 ˚C

Item may be washed at 40 ˚C

Item may be washed at 30 ˚C

Item may be hand washed

Dry clean only

Can be bleached in cold water

Do not bleach

Can be ironed at 200 ˚C max

Can be ironed at 150 ˚C max

Can be ironed at 100 ˚C max

Do not iron

Can be dry cleaned using any solvent

Dry clean with perchloride, lighter fuel,pure alcohol or R113 only

Dry clean with aviation fuel, pure alcohol or R113 only

Do not dry clean

Dry flat

Can be hung to dry

Dry on clothes hanger

Tumble dry, normal heat

Tumble dry, reduced heat

Do not tumble dry

Electrical warnings

To reduce the risk of fire, electrical shock, and other injuries, keep these safety precautions in mind:

- Operate the appliance only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home, consult your appliance dealer or local power company.
- Use only a grounded or polarized outlet. For your safety, this appliance is equipped with a polarized alternating current line plug having one blade wider than the other. This plug will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still doesn't fit, contact your electrician to replace your outlet.
- Protect the power cord. Power supply cords should be routed so that they are unlikely to be walked on or pinched by items placed on or against them. Pay particular attention to cords at plugs, convenience receptacles, and the point where they exit from the unit.
- Do not overload the wall outlet or extension cords. Overloading can result in fire or electric shock.

WD7704C8S-02410U_EN.indd 1 2008-04-17 ¿ÀÀü 11:32:34

Protecting the environment

- This appliance is manufactured from recyclable materials. If you decide to dispose of this appliance, please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be connected to a power source. Remove the door so that animals and small children cannot get trapped inside the appliance.
- Do not exceed the detergent quantities recommended in the detergent manu-facturers' instructions.
- Use stain removal products and bleaches before the wash cycle only when strictly necessary.
- Save water and electricity by only washing full loads (the exact amount depends upon the programme used).

Declaration of conformity

This appliance complies with European safety standards, EC directive 93/68 and EN Standard 60335.

Specification

TYPE		FRONT LOADING WASHER	
DIMENSION		WD7704C8/WD7702C8	
		W598mm X D600mm X H844mm	
WATER PRESSUERE		50 kPa ~ 800 kPa	
WATER VOLUME		60 ℓ	
NET WEIGHT		WD7704C8/WD7702C8	
		82 kg	
WASH AND DRY CAPACITY	WASH	7.5 kg (DRY LAUNDRY)	
	DRY	3.5 kg (DRY LAUNDRY)	
POWER CONSUMPTION	MODEL	WD7704C8/WD7702C8	
	WASHING	230 V	150 W
	WASHING AND HEATING	220 V	2000 W
		240 V	2400 W
	DRY	220 V	2000 W
		240 V	2400 W
	PUMPING	34 W	
SPIN REVOLUTION	MODEL	WD7704C8/WD7702C8	
PACKAGE Wt	PAPER	2.5 kg	
	PLASTIC	1.0 kg	
LOAD	MODEL	WD7704C8	WD7702C8
	rpm	1400	1200

WD7704C8S-02410U_EN.indd 2 2008-04-17 ¿ÀÀü 11:32:35

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

SAMSUNG

إرشادات لمالك الغسالة

WD7704C8(W/V/C/S/R)
WD7702C8(W/V/C/S/R)

قم بتسجيل المنتج الخاص بك على موقع
www.samsung.com/global/register
رقم الكود: DC68-02410U_AR

WD7704C8S-02410U_AR.indd 1 4/17/2008 7:20:11 PM

WD7704C8S-02410U_AR.indd 2 4/17/2008 7:20:11 PM

الميزات

١. **الغسيل الفضي(Ag^+)**
تتميز ميزة الفضة متناهية الصغر من Samsung باستخدام جزئيات الفضة متناهية الصغر لتنظيف الغسيل وحاوية الغسالة وتطهيرهما. هذا بالإضافة إلى الحصول على ملابس رقيقة وجوارب خالية من الروائح البشرية وذلك من خلال درجة حرارة منخفضة تصل إلى ٣٠ درجة مئوية. مما يؤدي إلى توفير الطاقة وحماية ألوان الملابس وأشكالها.

٢. **التأمين ضد عبث الأطفال**
تمكنك وظيفة "التأمين ضد عبث الأطفال" من إبقاء الأطفال بعيدًا عن الغسالة. حيث تضمن لك هذه الوظيفة عدم عبث الأطفال بأزرار تشغيل الغسالة. كما تنبهك عند تشغيلها.

٣. **تأجيل التشغيل**
تمكنك هذه الوظيفة من تأجيل وقت بدء الغسيل لفترة تصل إلى ٢٤ ساعة.

٤. **كي أقل**
سوف تتضاءل الحاجة إلى الكي نظراً لقيام برنامج "Samsung's Carefreewash" بتنظيف الملابس الناعمة والرقيقة والتعامل مع الألياف برقة. بفضل تقنية المعالجة الرقمية المعروفة عالميًا المطورة بواسطة Samsung. تعد وظيفة "الكوي السهل" برنامج مخصص للغسيل يساعدك على تقليل التجاعيد في الملابس الرقيقة بما يوفر الوقت الذي تستغرقه في الكي.

٥. **برنامج الملابس الناعمة والصوفية**
يمكنك اتخاذ حذر إضافي عند غسيل مثل هذه الأنواع من الملابس وذلك عن طريق تحديد درجة الحرارة الملائمة ودورة الغسيل الرقيق وكمية الماء المناسبة.

٦. **الغسيل بالهواء**
يقوم نظام "الغسيل بالهواء" بإزالة الروائح الكريهة والتخلص من البكتيريا والحشرات التي يصعب التخلص منها مع نظام الغسيل التقليدي. وهذه إحدى فوائد تقنية التنظيف بالهواء الفريدة.
• الملابس التي يمكن تنظيفها بالهواء : المعاطف الصوفية والسترات القطنية/الدخلية والسترات الثقيلة والبدل والمساند والوسائد وملابس التطريز
• الملابس التي لا يمكن تنظيفها بالهواء : الملابس الجلدية والحريرية والناعمة والبطاطين الكهربائية والملابس الأخرى المتسخة

WD7704C8S-02410U_AR.indd 3 4/17/2008 7:20:11 PM

احتياطات من أجل السلامة

تهانينا لشرائك غسالة Samsung. تحتوي تعليمات المالك هذه على معلومات مفيدة تتعلق بتركيب الجهاز وتشغيله والعناية به. الرجاء قراءة هذه الإرشادات بعناية لتتمكن من تحقيق أقصى استفادة من مزايا الغسالة والاستمتاع باستخدامها لسنوات عديدة.

قبل استخدام الجهاز

- قد تشكل مواد التعبئة خطورة على الأطفال؛ احتفظ بكافة مواد التعبئة (الأكياس البلاستيكية والمواد المصنوعة من مادة البوليستيرين...الخ) بعيداً عن متناول الأطفال.
- تم تصميم الجهاز للاستخدام المنزلي فقط.
- تأكد من قيام فنيين مؤهلين بتوصيل توصيلات الماء والكهرباء، مع مراعاة تعليمات الشركة المصنعة (راجع "تركيب الغسالة") وقواعد السلامة المحلية.
- يجب إزالة جميع مسامير التعبئة والشحن قبل تشغيل الجهاز. قد تحدث أضرار خطيرة في حالة عدم إزالتها. راجع الجزء "إزالة مسامير الشحن".
- قبل غسيل الملابس للمرة الأولى، يجب تشغيل الغسالة دورة كاملة دون ملابس.
  راجع "الغسيل للمرة الأولى".

إرشادات من أجل السلامة

- قبل تنظيف الجهاز أو نقله للصيانة، افصل قابس الجهاز من منفذ التيار الكهربي أو اضبط زر ⏻ (تشغيل/إيقاف) على وضع الإيقاف.
- تأكد من تفريغ جيوب الملابس التي سيتم غسلها. يمكن أن تتسبب الأشياء الصلبة والحادة مثل العملات المعدنية أو الدبابيس أو المسامير أو البراغي أو الحجارة في إحداث أضرار بالغة بالجهاز.
- افصل قابس الجهاز من مخرج التيار وأغلق صنبور الماء بعد التشغيل دائمًا.
- قبل فتح باب الجهاز، تأكد من جفاف الماء على الجهاز. لا تفتح الباب في حالة وجود الماء داخل الغسالة.
- قد يتسلق الحيوانات الأليفة والأطفال إلى داخل الجهاز. افحص الجهاز كل مرة قبل التشغيل.
- يصبح الباب الزجاجي ساخنًا جدًا أثناء دورة الغسيل. تأكد من إبعاد الأطفال عن الجهاز أثناء تشغيل الجهاز.
- لا تحاول إصلاح الجهاز بنفسك. قد تؤدي عمليات الإصلاح من قبل الأفراد غير الفنيين أو غير المؤهلين إلى حدوث إصابات و/أو إحداث المزيد من الخلل بالجهاز.
- في حالة تلف قابس الجهاز (سلك التيار الكهربي)، يجب تغييره من قبل الشركة المصنعة أو وكيل الصيانة الخاص بها أو أي فني مؤهل لتجنب التعرض لأي خطر.
- يجب صيانة هذا الجهاز من قبل مركز الخدمات المعتمد. ويجب تبديل قطع الغيار بقطع غيار أصلية فقط.
- هذا الجهاز غير مخصص لاستخدام الأطفال الصغار أو الأشخاص ذوي الاحتياجات الخاصة ما لم يخضعوا لإشراف شخص مسؤول للتأكد من إمكانية استخدامهم للجهاز بشكل آمن.
  يجب أن يخضع الأطفال للإشراف لضمان عدم عبثهم بالجهاز.
- •إذا كان تم توصيل هذا الجهاز بالتيار الكهربي من خلال كبل إضافي أو جهاز توليد للتيار الكهربي محمول، يجب وضع الكبل الإضافي أو جهاز توليد التيار الكهربي المحمول بشكل لا يجعله عرضة للبلل أو الرطوبة. بالإضافة إلى أنه يجب أن يكون معدل مرور التيار في الكبل الإضافي أو في جهاز توليد التيار الكهربي المحمول مناسب للجهاز.
- يجب أن يتم توصيل هذا الجهاز من خلال مأخذ قوي الاحتمال لضمان الاستهلاك الصحيح للطاقة.
- يجب وضع الجهاز بحيث يسهل الوصول إلى مأخذ التوصيل بعد تركيبه.
- يُحظر استخدام الماء المعالجة والتي تحتوي على زيوت أو كريمات أو مستحضرات، والتي تكون في الغالب موجودة في المستحضرات الجلدية أو عيادات التدليك.
  - وإلا سيؤدي هذا إلى إتلاف التغليف وهو ما يؤدي بدوره إلى التعطل أو تسرب الماء.
- وبالنسبة لأنبوب الغسيل الداخلي فهو مصنوع بحيث يكون مضاداً للصدأ. ولكن في حالة ترسب بعض المعادن الصغيرة مثل دبابيس الشعر في ذلك الأنبوب لفترة زمنية طويلة، فقد يتعرض الأنبوب للصدأ نتيجة لذلك.
  - يُحظر أيضاً ترك الماء التي تحتوي على الكلور أو أي مواد كيميائية في الأنبوب لفترة زمنية طويلة.
  - يُحظر استخدام الماء التي تحتوي على المعادن بصورة منتظمة أو تركها في الأنبوب لفترة زمنية طويلة.

  وفي حالة ظهور الصدأ على سطح الأنبوب، يفضل تنظيف سطح الأنبوب باستخدام سائل تنظيف (محايد) واستخدام قطعة قماش ناعمة أو قطعة إسفنج في التنظيف. (يُحظر بأي حال من الأحوال استخدام فرشة معدنية في التنظيف)
- الغسالات التي تحتوي على فتحات تهوية بقاعدتها، يجب تجنب سد السجاد لهذه الفتحات.
- استخدم أطقم خراطيم جديدة، حيث يجب عدم إعادة استخدام الخراطيم القديمة.
- يجب عدم استخدام المجفف في حالة استخدام مواد كيميائية للتنظيف.

WD7704C8S-02410U_AR.indd 4 4/17/2008 7:20:12 PM

جدول المحتويات

احتياطات من أجل السلامة . . . . . **داخل الغلاف**

تركيب الغسالة A-١
إخراج الغسالة من صندوق التعبئة A-١
نظرة عامة حول الغسالة A-١
اختيار مكان الغسالة A-٢
ضبط استواء أرجل الغسالة A-٢
إزالة مسامير الشحن A-٢
توصيل خرطوم توريد الماء A-٣
وضع خرطوم التصريف A-٤

غسيل الملابس B-١
نظرة عامة حول لوحة التحكم B-١
غسيل الملابس باستخدام "التحكم الذكي" B-٣
غسيل الملابس يدوياً B-٤
كيفية استخدام خيارات الغسيل بالهواء B-٤
استخدام تأجيل التشغيل B-٥
تنشيف الملابس B-٥
الغسيل للمرة الأولى B-٥
وضع مسحوق الغسيل في الغسالة B-٥
تلميحات وأفكار مفيدة للغسيل B-٦

صيانة الغسالة C-١
تصريف الماء من الغسالة عند الطوارئ C-١
إصلاح جهاز غسالة متجمد C-١
تنظيف الأسطح الخارجية C-١
تنظيف درج مسحوق الغسيل والموضع الداخلي C-٢
تنظيف مصفاة المخلفات C-٢
تنظيف المصفاة الشبكية المتصلة بخرطوم الماء C-٣

استكشاف المشاكل وحلها D-١
المشاكل والحلول D-١
فهم رسائل الخطأ D-١

جدول البرامج E-١

الملحق F-١
جدول العناية بالأقمشة F-١
التنبيهات الكهربية F-١
حماية البيئة F-٢
إعلان التوافق F-٢
المواصفات F-٢

WD7704C8S-02410U_AR.indd 5 4/17/2008 7:20:12 PM

إخراج الغسالة من صندوق التعبئة

أخرج الغسالة من الصندوق وافحصها للتأكد من عدم تعرضها لأي تلف أثناء الشحن. تأكد أيضاً من وجود جميع القطع المبينة أدناه.
في حالة تعرض الغسالة لأي تلف أثناء الشحن أو عدم وجود جميع القطع المبينة أدناه، اتصل بموزع Samsung فوراً.

نظرة عامة حول الغسالة

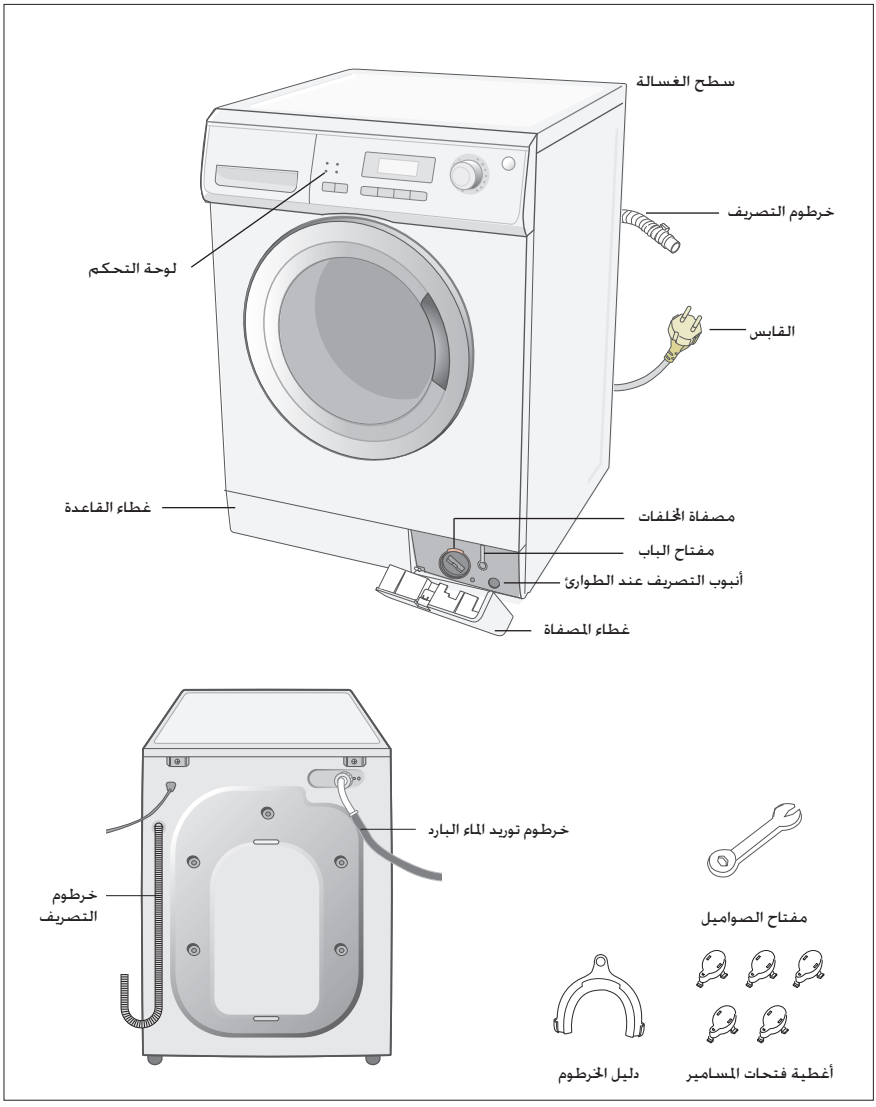

WD7704C8S-02410U_AR.indd 1 4/17/2008 7:20:13 PM

اختيار مكان الغسالة

قبل تركيب الغسالة، اختر مكاناً تتوفر به الخصائص التالية:

- أرض ثابتة ومستوية (إذا كانت الأرض غير مستوية، راجع "ضبط استواء أرجل الغسالة" المبين أدناه).
- مكان بعيد عن أشعة الشمس المباشرة.
- تهوية مناسبة
- لا تقل درجة حرارة الغرفة عن درجة صفر مئوية.
- بعيد عن مصادر الحرارة مثل الفحم أو الغاز

تأكد من عدم وضع الغسالة فوق سلك التيار الكهربي.
يجب تجنب سد فتحات التهوية بواسطة السجاد عند تركيب الغسالة على أرض مغطاة بالسجاد.

ضبط استواء أرجل الغسالة

إذا كانت الأرض غير مستوية، اضبط الأرجل (لا تضع قطع من الخشب أو أي أشياء أخرى تحت أرجل الغسالة):

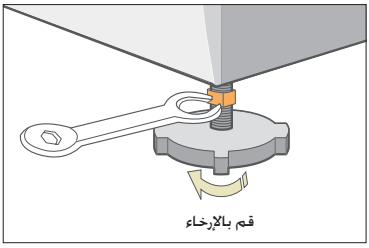
قم بالإرخاء

١. أرخ برغي الرجل بتدويره باليد حتى يصل إلى الارتفاع المطلوب.
٢. اربط صمولة التأمين بلفها باستخدام مفتاح الصواميل المزود مع الجهاز.

سيؤدي تثبيت الغسالة على سطح غير مستو أو ضعيف إلى ارتفاع صوت الغسالة أو اهتزازها أثناء التشغيل.
(مسموح فقط بزاوية ١ درجة).

إزالة مسامير الشحن

قبل استخدام جهاز الغسالة، يجب إزالة مسامير الشحن الخمسة من اللوحة الخلفية للجهاز.
لإزالة المسامير:

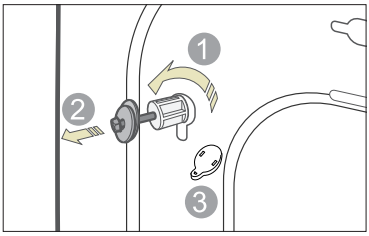

١. أرخ جميع المسامير بواسطة مفتاح الصواميل المزود مع الجهاز قبل إزالتها.
٢. اسحب كل رأس مسمار وأخرجه من خلال الجزء العريض للفتحة.
كرر ذلك لإزالة كل مسمار.
٣. سد جميع الفتحات باستخدام الأغطية البلاستيكية المزودة مع الجهاز.
٤. احتفظ بمسامير الشحن لاستخدامها في المستقبل.

WD7704C8S-02410U_AR.indd 2 4/17/2008 7:20:13 PM

توصيل خرطوم توريد الماء

يجب توصيل أحد طرفي خرطوم توريد الماء بالغسالة وتوصيل الطرف الآخر للخرطوم بصنبور الماء. لا تمدد خرطوم توريد الماء. إذا كان الخرطوم قصيراً للغاية، بدّله بخرطوم أطول عالي الضغط.

لتوصيل خرطوم توريد الماء:

١. خذ مثبت الذراع الذي على شكل حرف L الذي يلائم خرطوم توريد الماء البارد ووصله إلى مدخل توريد الماء البارد الموجود في اللوحة الخلفية للغسالة. أحكم توصيله باليد.

٢. صل الطرف الآخر لخرطوم توريد الماء البارد بصنبور الماء الساخن وأحكم توصيله باليد. يمكنك، عند الحاجة، إعادة توصيل خرطوم الماء بالغسالة من خلال إرخاء مثبت الخرطوم ولف الخرطوم وإعادة تشديد المثبّت.

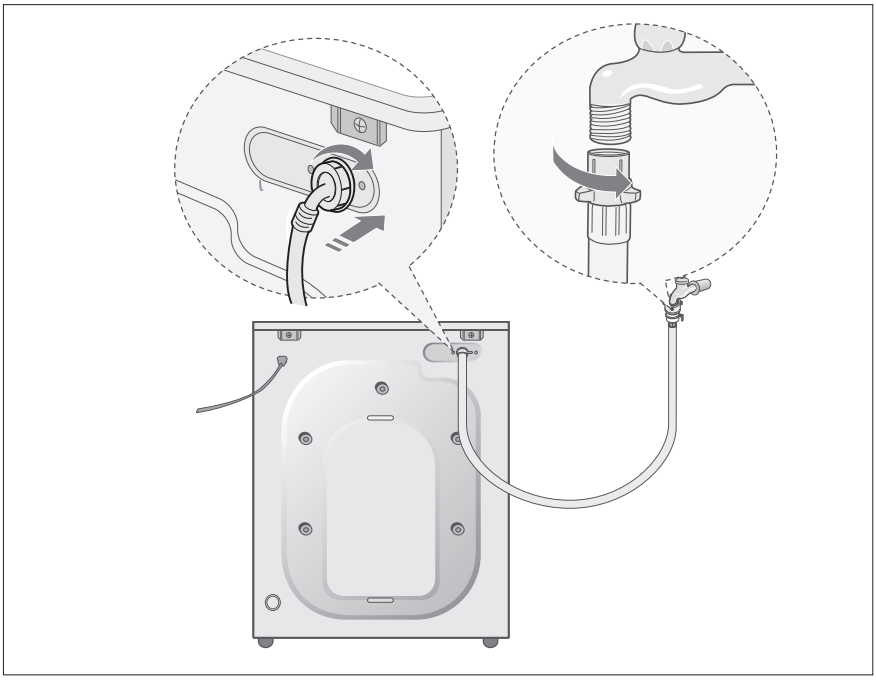

اختياري:

١. خذ مثبت الذراع الذي على شكل L الأحمر لخرطوم توريد الماء الساخن ووصله إلى مدخل توريد الماء الساخن الأحمر الموجود على اللوحة الخلفية للغسالة. أحكم توصيله باليد.

٢. صل الطرف الآخر لخرطوم توريد الماء الساخن بصنبور الماء الساخن وأحكم توصيله باليد.

٣. استخدم قطعة على شكل Y إذا أردت استخدام الماء البارد فقط.

WD7704C8S-02410U_AR.indd 3 4/17/2008 7:20:14 PM

(توصيل خرطوم توريد الماء (اختياري

١. أزل المحول من خرطوم تزويد الماء.	
٢. أولاً، باستخدام مفك برغي من نوع "+" أرخ البراغي الأربعة الموجودة بالمحول. ثم أخرج المحول ودور الجزء (ب) باتجاه السهم حتى توجد مسافة مقدارها ٥ مم بينهما.	
٣. صل المحوّل إلى صنبور الماء بتشديد البراغي بإحكام. ثم لف الجزء (ب) باتجاه السهم وضع الجزءين (أ) و (ب) معا.	
٤. صل خرطوم تزويد الماء بالمحول. اجذب الجزء (ج) من خرطوم توريد الماء. عند ترك الجزء (ج)، يتصل الخرطوم تلقائياً بالمحول محدثاً صوت "إغلاق".	
٥. صل الطرف الآخر من خرطوم توريد الماء بصمام دخول الماء الموجود خلف الغسالة. لف خرطوم تزويد الماء في اتجاه عقارب الساعة.	

ملاحظة بعد اكتمال التوصيل، إذا تسرب الماء من الخرطوم، كرر نفس الخطوات. استخدم صنبور من النوع العادي للتزويد بالماء. إذا كان الصنبور مربعاً أو كبيراً جداً، أزل الحلقة الفاصلة قبل إدخال الصنبور إلى المحوّل.

وضع خرطوم التصريف

يمكنك وضع نهاية خرطوم التصريف بثلاث طرق:

فوق حافة حوض الغسيل.

يجب وضع خرطوم التصريف على ارتفاع يتراوح بين ٦٠ و٩٠ سم.
للاحتفاظ بثني خرطوم التصريف، استخدم دليل الخرطوم البلاستيكي المزود مع الجهاز. ثبت الدليل على الجدار بواسطة خطاف أو ثبته في الصنبور بواسطة سلك أو حبل لمنع سقوط خرطوم التصريف على الأرض.

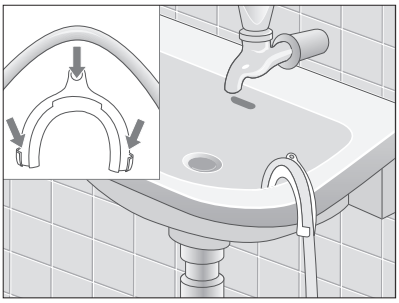

في فرع أنبوب تصريف الحوض

يجب أن يكون فرع أنبوب التصريف فوق سيفون الحوض بحيث يكون طرف الخرطوم على ارتفاع ٦٠ سم على الأقل عن الأرض.

في أنبوب تصريف

توصي Samsung باستخدام أنبوب عمودي على ارتفاع ٦٥ سم؛ يجب ألا يقل طوله عن ٦٠ سم ولا يزيد عن ٩٠ سم.

WD7704C8S-02410U_AR.indd 4 4/17/2008 7:20:15 PM

نظرة عامة حول لوحة التحكم

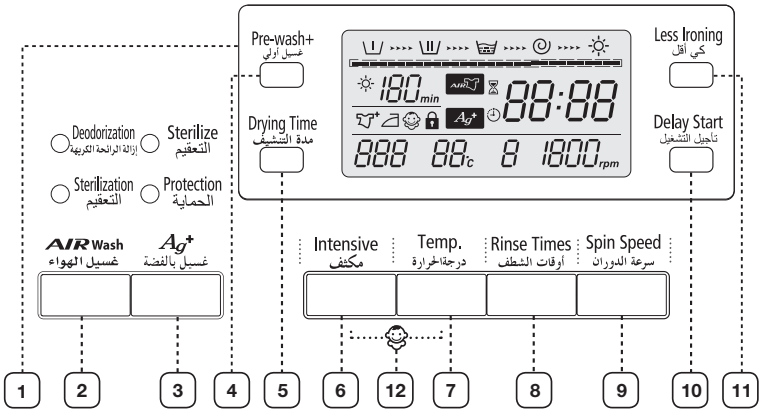

١. **لوحة العرض الرسومية الرقمية**
تعرض الوقت المتبقي لدورة الغسيل وكافة المعلومات الخاصة بالغسيل ورسائل الخطأ.

٢. **الزر غسيل بالهواء**
اضغط على الزر بشكل متكرر لتشغيل دورة إزالة الروائح الكريهة من الملابس وتطهيرها.
لا يمكن تشغيل أي دورة تنظيف أخرى أثناء تشغيل وظيفة الغسيل بالهواء.
إزالة الروائح الكريهة : إزالة الروائح الكريهة من الملابس
تطهير الملابس : إزالة البكتيريا والحشرات من الملابس

٣. **زر تحديد غسيل بالفضة (Ag+)**
يتم توفير ماء "نانو الفضة" أثناء عملية الغسيل وكذلك في عملية الشطف الأخيرة، مما يوفر تعقيماً وحماية من البكتيريا.
(يمكنك اختيار "التطهير بالبخار" أو "الحماية". "لاتطهير بالبخار + "الحماية" .)

٤. **اختيار الزر غسيل أولي**
اضغط الزر لاختيار الغسيل الأولي. يتوفر خيار الغسيل الأولي فقط مع برامج قطن و ملابس ملونة و اصطناعي و رقيق و أوساخ كثيرة.

٥. **اختيار زر مدة التنشيف**
يمكن أن تستمر مدة التنشيف حتى ١٩٠ دقيقة. عند اختيار زر التنشيف فقط، يتم بدء التنشيف بعد التجفيف . (الوقت المستغرق في التجفيف حوالي ١٥~١٧٠ دقيقة) إذا كنت ترغب في التنقل بين الغسيل والتنشيف، حدد الدورة التي تريدها عن طريق إدارة قرص اختيار الدورة ثم الضغط على الزر وقت التنشيف. لاختيار دور التنشيف، يمكنك تحديد الوقت فقط ولكن لا يمكنك تحديد درجة الحرارة وسرعة التدوير. وذلك نظراً لعدم ترشيح هواء ساخن أو رطوبة أثناء دورة التنشيف، ولا يتم أيضاً ترشيح أي رطوبة أو تكثف للبخار على جدران أو سقف حجرة الغسيل. (١٣٠ دقيقة ← ٩٠ دقيقة، ← ٦٠ دقيقة، ← ٣٠ دقيقة.)
إذا لم يجف الغسيل بالقدر الكافي، الرجاء إجراء تجفيف إضافي لمدة تتراوح بين ٣٠ و ٩٠ دقيقة كما يستلزم الأمر.

٦. **زر تحديد مكثف**
تزيد طاقة الغسيل عند تحديد هذا الزر. يمكن تحديد هذه الوظيفة للدورات قطن و ملابس ملونة واصطناعي وجينز وأوساخ كثيرة وحمولة متنوعة وغسيل هادئ. يؤدي الضغط على هذا الزر إلى التبديل بين تشغيل وإيقاف تشغيل.

٧. **زر تحديد درجة الحرارة**
اضغط على الزر بشكل متكرر للتنقل بين خيارات درجات حرارة المياه المتوفرة
(بارد (٠ درجة م) و ٣٠ درجة و ٤٠ درجة و ٦٠ درجة و ٩٥ درجة)
تختلف درجة الحرارة الافتراضية باختلاف دورة الغسيل. يمكنك أيضاً اختيار درجة حرارة معينة للغسيل من خيارات درجات الحرارة التي تم ضبطها مسبقاً.

٨. **زر تحديد شطف**
اضغط زر الشطف لإضافة دورات الشطف. الحد الأقصى لعدد دورات الشطف هو ٥.

WD7704C8S-02410U_AR.indd 1 4/17/2008 7:20:15 PM

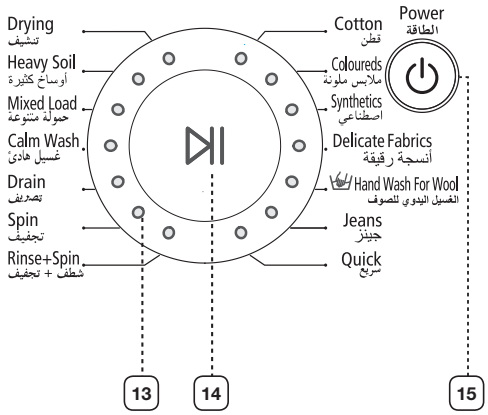

٩. زر تحديد دوران

اضغط على الزر بشكل متكرر للاختيار من بين سرعات الدوران المتوفرة.

WD7704C8	انتظار الشطف، بدون تجفيف (٠)، ٤٠٠ أو ٨٠٠ أو ١٤٠٠ لفة في الدقيقة
WD7702C8	انتظار الشطف، بدون تجفيف (٠)، ٤٠٠ أو ٨٠٠ أو ١٢٠٠ لفة في الدقيقة

٠ : بدون تجفيف بدون عرض : إيقاف الشطف

١٠. زر تحديد تأجيل التشغيل

اضغط على الزر بشكل متكرر للاختيار من بين خيارات تأجيل التشغيل المتوفرة (من ٣ ساعات إلى ١٩ ساعة بواقع ساعة واحدة).

تشير الساعات المعروضة إلى وقت دورة الغسيل المنتهية.

١١. زر تحديد كي أقل

يؤدي تحديد "كي أقل" إلى تقليل الثنيات وتوفير وقت الكي. (الدورات المتاحة: قطن، ملابس ملونة، اصطناعي، غسيل يدوي، سريع، حمولة متنوعة، بطانيات، الشطف والتجفيف، التجفيف)

١٢. زر تحديد التأمين ضد عبث الأطفال

يمنع هذا الزر الأطفال من العبث بالغسالة.

الزر تشغيل/إيقاف - لضبط البرنامج على: اضغط على الزر تشغيل/إيقاف مؤقت لتشغيل الغسالة. اضغط واستمر في الضغط على الزر [الإعدادات المفضلة] + [درجة الحرارة] لمدة ٢-٣ ثانية. يمكن تشغيل هذا البرنامج فقط عند تشغيل الغسالة. بمجرد تشغيل برنامج التأمين ضد عبث الأطفال أثناء الغسيل، لا يتم تنشيط أي زر حتى يتم إيقاف تشغيل البرنامج. ولن يتم حتى تنشيط الزر الطاقة. يضيء مصباح "التأمين ضد عبث الأطفال". لإيقاف تشغيل البرنامج: اضغط مع الاستمرار في الضغط على الزر [الإعدادات المفضلة]+[درجة الحرارة] مرة أخرى من ثانيتين إلى ثلاث ثوان. ومن ثم ينطفئ مصباح البرنامج ويتم إيقاف تشغيله.

ملاحظة: تحقق من الزر التأمين ضد عبث الأطفال أولاً في حالة عدم تشغيل أي زر في أثناء عمل الغسالة.

١٣. قرص التحكم الذكي

قم بإدارة القرص لاختيار برنامج من بين برامج الغسيل الأربعة عشر المتاحة

قطن أو ملابس ملونة أو اصطناعي أو رقيق أو صوف أو غسيل يدوي أو سريع أو تنشيف أو أوساخ ثقيلة أو حمولة متنوعة أو (تصريف أو تجفيف أو الشطف والتجفيف

١٤. زر تحديد تشغيل/إيقاف المؤقت

اضغط على الزر تشغيل/إيقاف لإيقاف أحد برامج الغسيل أو إعادة تشغيله. إذا كنت تريد تغيير دورة الغسيل أثناء تشغيل أحد الدورات، اضغط على هذا الزر لإيقاف الدورة التي تعمل حاليا ثم اضغط عليه مرة أخرى لإعادة تشغيل الغسالة بعد اختيار دورة غسيل مختلفة.

١٥. زر تحديد (تشغيل/إيقاف)

اضغط على الزر مرة لتشغيل الغسالة، واضغط عليه مرة أخرى لإيقاف الغسالة عن العمل. في حالة ضغط زر تشغيل الغسالة وتركها لمدة تزيد عن ١٠ دقائق دون ضغط أي زر، يتوقف الجهاز عن العمل بشكل تلقائي.

WD7704C8S-02410U_AR.indd 2 4/17/2008 7:20:16 PM

غسيل الملابس باستخدام "التحكم الذكي"

تسهل الغسالة الجديدة من عملية غسل الملابس. باستخدام نظام "التحكم الذكي" الأوتوماتيكي من Samsung. عند اختيار برنامج غسيل، تقوم الغسالة بضبط درجة الحرارة ووقت الغسيل وسرعات الغسيل المناسبة.

لغسيل الملابس باستخدام برامج "التحكم الذكي":

١. افتح صنبور الماء.
٢. اضغط الزر ⏻ (تشغيل/إيقاف).
٣. افتح الباب.
٤. ضع الملابس قطعة بقطعة في الحاوية دون تجاوز سعتها.
٥. أغلق الباب.
٦. أضف مسحوق الغسيل وملين القماش ومسحوق الغسيل الأولي (عند الحاجة) في الحجيرة الخاصة به.
٧. قم بإدارة قرص التحكم الذكي لتحديد البرنامج الملائم لنوع الملابس قطن أو ملابس ملونة أو اصطناعي أو ملابس رقيقة أو صوفي أو غسيل يدوي أو سريع أو تنشيف أو أوساخ ثقيلة أو حمولة متنوعة أو بطاطين أو تصريف أو تجفيف أو شطف وتجفيف.

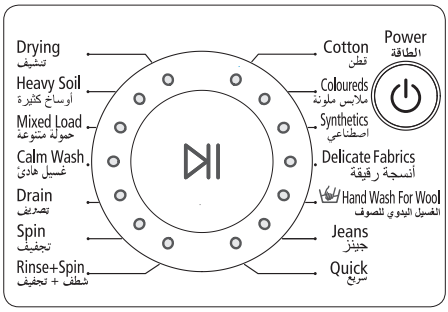

يمكنك مشاهدة المؤشرات المضاءة في لوحة التحكم.

٨. يمكنك في هذا الوقت، التحكم في حرارة الغسيل وأوقات الدوران وسرعة الدوران وتأجيل التشغيل من خلال الضغط على زر الاختيار الملائم.
٩. اضغط زر تشغيل/إيقاف مؤقت الموجود في قرص "التحكم الذكي" وعندها تبدأ دورة الغسيل. يضيء مؤشر العملية ويظهر الوقت المتبقي من دوران الغسيل على الشاشة.

خيارات الإيقاف المؤقت (وظيفة الإيقاف وإضافة الغسيل)

في غضون ٥ ثوان من بدء التشغيل، يمكنك إضافة غسيل أو إخراجه.
إذا قمت بالضغط على الزر تشغيل/إيقاف مؤقت، يتم فتح الباب فوراً.
وفي حالة وجود كمية كبيرة من الماء في الغسالة أو كانت درجة حرارة الماء مرتفعة للغاية، لن يمكن فتح الباب.
بعد إغلاق الباب، اضغط مرة أخرى على الزر تشغيل/إيقاف مؤقت لمتابعة عملية الغسيل.

عند انتهاء الدورة:

بعد انتهاء دورة الغسيل بالكامل، يتم فصل التيار بشكل تلقائي.
١. افتح الباب.
٢. أخرج الملابس.

WD7704C8S-02410U_AR.indd 3 4/17/2008 7:20:16 PM

غسيل الملابس يدوياً

يمكنك غسيل الملابس يدوياً دون استخدام ميزة "التحكم الذكي".

للقيام بذلك:

١. قم بتوريد الماء.
٢. اضغط الزر ⏻ (تشغيل/إيقاف) الموجود بالغسالة.
٣. افتح الباب.
٤. ضع الملابس قطعة بقطعة في الحاوية دون تجاوز سعتها.
٥. أغلق الباب.
٦. ضع مسحوق الغسيل. وعند الحاجة، مليّن القماش أو مسحوق الغسيل الأولي في الحجيرات المناسبة.
٧. اضغط الزر درجة الحرارة لاختيار درجة حرارة الماء
(بارد (٠ درجة م) و ٣٠ درجة و ٤٠ درجة و ٦٠ درجة و ٩٥ درجة)
٨. اضغط على زر الشطف لتحديد الرقم المطلوب لدورات الشطف.
الحد الأقصى لعدد دورات الشطف هو خمس.
ستستمر مدة الغسيل وفقًا لعدد الدورات.
٩. اضغط على الزر دوران لتحديد سرعة الدوران. [٠ أو ٤٠٠ أو ٨٠٠ أو ١٢٠٠ أو ١٤٠٠دورة في الدقيقة]

ملاحظة: يسمح لك برنامج انتظار الشطف بإخراج الملابس المبتلة من الغسالة.
٠ : بدون تجفيف بدون عرض : إيقاف الشطف

١٠. اضغط على الزر بشكل متكرر للاختيار من بين خيارات تأجيل التشغيل المتوفرة (من ٣ ساعات إلى ١٩ ساعة بواقع ساعة واحدة). تشير الساعات المعروضة إلى وقت دورة الغسيل المنتهية.
١١. اضغط على الزر تشغيل/إيقاف مؤقت وعندها يبدأ الجهاز بالدوران.

كيفية استخدام خيارات الغسيل بالهواء

يقوم نظام الغسيل بالهواء بتنظيف الملابس وإزالة الروائح الكريهة منها وتقليل الثنيات الموجودة بها نظراً لتنظيفها بالهواء بسلاسة.

أمثلة حول الأوقات التي يتطلب فيها استخدام الغسيل بالهواء

١. عندما تفوح رائحة الملابس
٢. الملابس الصوفية التي تم الاحتفاظ بها في دولاب الملابس من الشتاء الماضي وبدأت تبلى وتنبعث منها رائحة كريهة.

ميزات الغسيل بالهواء

١. توفير المياه والطاقة والوقت المستغرق في التنظيف والكي.
٢. يتميز بفاعليته في تنظيف الملابس التي يستعصي غسلها بالطرق التقليدية. (البطاطين والوسائد والدمى إلخ.)
- إزالة ٩٩٪ من البكتيريا الموجودة بهذه الملابس للتخلص من الحساسية.

دورة الغسيل بالهواء (إزالة الروائح الكريهة والتطهير)

١. افتح الباب وأدخل الملابس. ثم أغلق الباب.
٢. اضغط على الزر الطاقة.
٣. قم بإدارة قرص اختيار دورة الغسيل ثم حدد دورة الغسيل بالهواء (إزالة الروائح الكريهة والتطهير).
- يتعذر عليك اختيار وظائف أخرى أثناء تشغيل دورة الغسيل بالهواء.
٤. أغلق الباب ثم اضغط على الزر تشغيل/إيقاف مؤقت.
- يتم إمداد الغسالة بالمياه وتصريفها أثناء كافة الدورات بصفة مستمرة.

عند انتهاء كل دورة غسيل تقوم الحاوية بالدوران لمدة ٣٠ دقيقة لتدوير الملابس. يمكنك إيقاف الغسالة وإخراج الملابس في أي وقت اثناء التدوير.

الملابس التي يمكن تنظيفها بالهواء

- المعطف الصوف والبلوزات المصنوعة من القطن وريش الأوز والجواكت والسترات والبطاطين (قطعتان أو أقل)

الملابس التي يتعذر إزالة الروائح الكريهة منها

- الملابس الجلدية والمصنوعة من فراء المنك والفرو والحرير الطبيعي والأقمشة المخملية إلخ والتي يمكن تلفها عند إجراء عملية إزالة الروائح الكريهة
- الملابس الداخلية التي بها فتحات كثيرة والدمى المحتوية على مواد صمغية والوسائد والسترات. حيث قد تؤدي درجات الحرارة إلى فصل بسبب المواد الصمغية.
- الرجاء توخى الحذر مع الملابس المحتوية على أزرار نظرًا لاحتمال تعرضها للكسر.
- الملابس المستخدم فيها النشا. فقد تصبح أقل صلابة وبتغير شكلها.
- قد يلحق الضرر بملابس الخروج المتسخة لأن الأوساخ قد تصبح صلبة.

الملابس التي يتعذر تطهيرها

- المفروشات الثقيلة مثل الوسائد الخشبية
- الوسائد وملابس النوم المملوءة بالقش أو البلاستيك بدلاً من القطن
- البطاطين الكهربائية
- ملابس النوم الصوفية تتساقط أليافها ويتجمع عليها الكثير من الغبار

يجب عدم استخدام دورة الغسيل بالهواء للمفروشات المملوءة بالإسفنج أو المواد العازلة.
قد ينشب الحريق في الأسفنج أو المادة العازلة ويلحق الضرر بالمنتج.

WD7704C8S-02410U_AR.indd 4 4/17/2008 7:20:16 PM

استخدام تأجيل التشغيل

يمكنك ضبط جهاز الغسالة لإنهاء عملية الغسيل تلقائياً بعد وقت معين، باختيار وقت من ٣ ساعات وحتى ١٩ ساعة للتأجيل (بواقع ساعة واحدة). تشير الساعات المعروضة إلى وقت دورة الغسيل المنتهية.

للقيام بذلك:

١. يمكنك ضبط الغسالة تلقائياً أو يدوياً حسب نوع الملابس التي تريد غسلها.
٢. اضغط على الزر تأجيل التشغيل بشكل متكرر حتى تصل إلى وقت التأجيل المطلوب.
٣. اضغط على الزر تشغيل/إيقاف مؤقت. وعندئذٍ سيومض مؤشر تأجيل التشغيل. وتبدأ الساعة بالعد التنازلي حتى تصل إلى وقت الإنهاء.
٤. لإلغاء وظيفة "تأجيل التشغيل"، اضغط على الزر ⏻ (تشغيل/إيقاف)، ثم قم بتشغيل الغسالة مرة أخرى.

تنشيف الملابس

يقوم المجفف الحراري بتسخين الهواء بدرجة مناسبة وتوجيهه ناحية الملابس. من ثم يقوم الهواء التجفيف الكثيف بامتصاص الرطوبة والاتجاه إلى قناة التكثيف وهي بيئة منخفضة الحرارة. لذا يتم تكثيف الهواء المشبع بالرطوبة بخفض درجة حرارته العالية جداً، فيتحول إلى ماء ويتم ضخه خارج الغسالة.

الغسيل للمرة الأولى

قبل غسيل الملابس للمرة الأولى، يجب تشغيل الجهاز دورة كاملة دون ملابس.

للقيام بذلك:

١. اضغط الزر ⏻ (تشغيل/إيقاف).
٢. ضع كمية قليلة من مسحوق الغسيل في الجزء المخصص له في Ⅱ درج مسحوق الغسيل.
٣. افتح درج المسحوق وضع القليل من المسحوق فيه.
٤. اضغط على زر درجة الحرارة بشكل متكرر حتى تظهر درجة الحرارة ٤٠ °م.
٥. اضغط على الزر تشغيل/إيقاف مؤقت.

• يزيل ذلك أي ماء متبقي في الغسالة نتيجة للتشغيل الاختباري الذي قامت به الشركة المصنعة للجهاز.

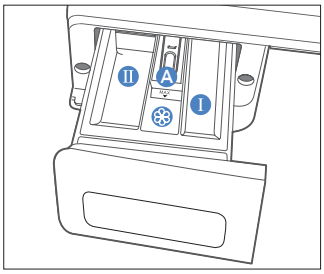

الموزع Ⅰ : مسحوق للغسيل الأولي أو النشا.
الموزع Ⅱ : مسحوق الغسيل لدورة الغسيل الرئيسية وملين الأقمشة ومواد النقع ومادة التبييض ومواد إزالة الأوساخ.
الموزع ❀ : المواد الإضافية، مثل مكون أو ملين الأقمشة (لا تتجاوز حد الإدخال السفلي "A").

وضع مسحوق الغسيل في الغسالة

١. اسحب درج مسحوق الغسيل.
٢. أضف مسحوق الغسيل في الحجيرة Ⅱ.
٣. أضف ملين الأقمشة في الحجيرة ❀ (إذا كنت ترغب في ذلك).
٤. أضف مسحوق الغسيل الأولي في الحجيرة Ⅰ (إذا كنت ترغب في ذلك).

تنبيه:

يجب إذابة ملين الأقمشة المركز أو السميك بقليل من الماء قبل صبه في الموزع (لمنع إعاقة تدفق الماء.

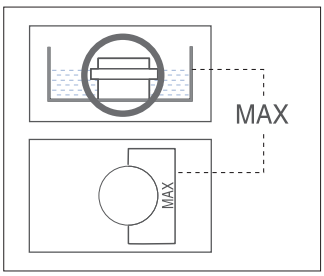

WD7704C8S-02410U_AR.indd 5 4/17/2008 7:20:17 PM

تلميحات وأفكار مفيدة للغسيل

فرز الملابس: افرز الملابس حسب الخصائص التالية:

- **علامة العناية بنوع القماش:** افرز الملابس إلى ملابس قطنية وألياف ممزوجة واصطناعية وملابس حريرية وأصواف ورايون.
- **اللون:** قسم الملابس إلى ملابس بيضاء وملابس ملونة. اغسل الملابس الجديدة والملابس الملونة كل على حدة.
- **الحجم:** ضع الملابس من مختلف الأحجام والمقاسات في مرة واحدة لتحسين عملية الغسيل.
- **رقة الملمس:** اغسل الملابس الرقيقة على حدة. باستخدام برنامج الملابس الرقيقة من أجل غسيل الصوف الخالص والستائر والملابس الحريرية. افحص العلامات الموجودة بالملابس التي تريد غسلها أو راجع جدول العناية بالأقمشة في الملحق.

تفريغ الجيوب: قد تحدث العملات المعدنية ودبابيس الأمان وما شابه أضراراً بالأقمشة وحاوية الغسيل وخزان الماء.

التثبيت بإحكام: أغلق أي سوست أو أزرار أو خطافات بالملابس؛ كما يجب ربط الأحزمة أو الأشرطة المفكوكة.

الغسيل الأولي للملابس القطنية: تقدم لك الغسالة الجديدة باستخدام مساحيق الغسيل الحديثة. أفضل نتائج الغسيل. ومن ثم فهي تساعدك على توفير الطاقة الكهربائية والوقت والماء والمسحوق. لكن إذا كانت الملابس القطنية شديدة الاتساخ. استخدم الغسيل الأولي بواسطة مسحوق الغسيل الذي يحتوي على البروتين.

تحديد سعة حمل الملابس: لا تتجاوز حمل الغسيل في الغسالة حيث يؤدي ذلك إلى عدم الحصول على النظافة التي تريدها. استخدم الجدول التالي لتحديد سعة الحمل لنوع الغسيل الذي ترغب في غسيله.

نوع القماش	سعة الحمل
الملابس القطنية/الملابس الملونة	٧,٥ كجم
اصطناعي	٤,٠ كجم
رقيق	٢,٥ كجم
صوف	٢,٠ كجم

تلميحات حول مسحوق الغسيل: يعتمد نوع مسحوق الغسيل الذي تستخدمه على نوع القماش (القطن أو الألياف الصناعية أو الملابس الرقيقة أو الملابس الصوفية)، والألوان ودرجة حرارة الماء ودرجة الاتساخ ونوعه.
استخدم دوماً مسحوق الغسيل ذي الرغوة القليلة والذي ُصمم خصيصاً للغسالات الأوتوماتيكية.
اتبع توصيات الشركة المصنعة لمسحوق الغسيل على أساس وزن الملابس ودرجة الاتساخ وما إذا كان الماء عسراً في منطقتك. إذا لم تكن تعرف ما إذا كان الماء عسراً أم لا في منطقتك. اتصل بمصلحة الماء.
ملاحظة: احفظ مسحوق الغسيل والإضافات في مكان آمن وجاف بعيداً عن متناول الأطفال.

WD7704C8S-02410U_AR.indd 6 4/17/2008 7:20:17 PM

تصريف الماء من الغسالة عند الطوارئ

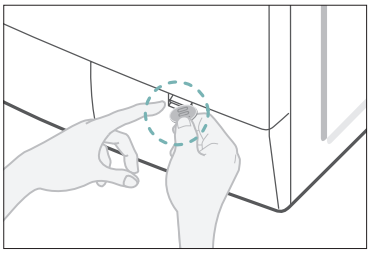

١. افصل الغسالة من مصدر التيار الكهربي.
٢. افتح غطاء المصفاة باستخدام عملة معدنية أو مفتاح.

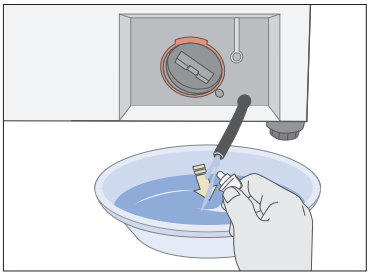

٣. فك غطاء تصريف الطوارئ عن طريق اللف لليسار.
أمسك الغطاء من نهاية أنبوب تصريف الطوارئ واجذبه ببطء مسافة حوالي ١٥ سم.

٤. اسمح بتصريف الماء بأكمله ليتدفق في وعاء.
٥. أعد إدخال أنبوب التصريف وثبت الغطاء مرة أخرى.
٦. أعد غطاء المصفاة إلى مكانه.

إصلاح جهاز غسالة متجمد

إذا انخفضت درجة الحرارة إلى أقل من درجة التجمد وتجمدت الغسالة:

١. افصل الغسالة من مصدر التيار الكهربي.
٢. صب الماء الدافئ على صنبور الماء لإرخاء خرطوم توريد الماء وفصله.
٣. أزل خرطوم توريد الماء وانقعه في الماء الدافئ.
٤. صب الماء الدافئ في حاوية الغسالة واتركه لمدة ١٠ دقائق.
٥. أعد توصيل خرطوم توريد الماء إلى صنبور الماء وتأكد من أن توريد الماء والتصريف يجري كما ينبغي.

تنظيف الأسطح الخارجية

١. امسح الأسطح الخارجية لجهاز الغسالة، بما في ذلك لوحة التحكم بقطعة من القماش الناعم ومسحوق تنظيف منزلي غير خادش.
٢. استخدم قطعة من القماش الناعم لتنشيف الأسطح الخارجية.
٣. لا تصب الماء على الغسالة.

WD7704C8S-02410U_AR.indd 1 4/17/2008 7:20:17 PM

تنظيف درج مسحوق الغسيل والموضع الداخلي

١. اضغط ذراع الإرخاء الموجودة في داخل درج مسحوق الغسيل واسحبه إلى الخارج.
٢. قم بإزالة الغطاء من حجيرة ⊛.
٣. اغسل كل القطع بالماء الجاري.
٤. نظف الجزء الداخلي للدرج باستخدام فرشاة أسنان قديمة.
٥. أعد الغطاء (بدفعه بإحكام) إلى مكانه. وأعد القاسم الخاص بسائل مسحوق الغسيل إلى مكانه في الدرج.
٦. أعد الدرج إلى مكانه.
٧. شغّل برنامج الشطف دون وضع أي غسيل في الحاوية.

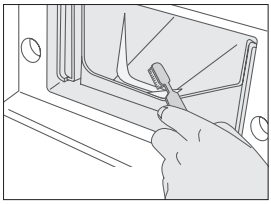
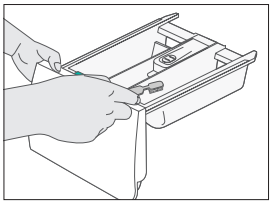
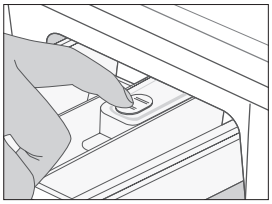

تنظيف مصفاة المخلفات

نظف المصفاة من المخلفات ٥ أو ٦ مرات في السنة. أو عند ظهور رسالة الخطأ التالية على الشاشة:

١. افتح غطاء المصفاة. راجع الجزء "تصريف الماء من الغسالة عند الطوارئ" في صفحة C-١.
٢. قم بإرخاء غطاء التصريف عند الطوارئ بتدويره إلى اليسار لصرف الماء من الجهاز.
راجع الجزء "تصريف الماء من الغسالة عند الطوارئ" في صفحة C-١.
٣. فك غطاء المصفاة واسحبه إلى الخارج.
٤. اغسل أية أوساخ أو مواد أخرى عالقة في المصفاة. تأكد أن مروحة مضخة التصريف الموجودة خلف المصفاة غير مسدودة. أعد مقدمة المصفاة إلى مكانها.

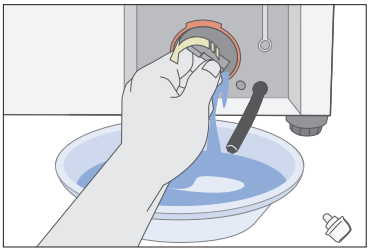
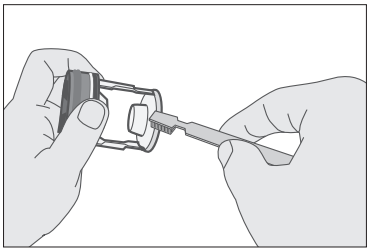

٥. أعد غطاء المصفاة إلى مكانه.

WD7704C8S-02410U_AR.indd 2 4/17/2008 7:20:18 PM

تنظيف المصفاة الشبكية المتصلة بخرطوم الماء

يجب تنظيف المصفاة الشبكية المتصلة بخرطوم الماء مرة واحدة في السنة على الأقل. أو عند مشاهدة رسالة الخطأ التالية على

الشاشة:

للقيام بذلك:

١. أغلق صنبور الماء المتصل بالغسالة.
٢. افصل الخرطوم عن اللوحة الخلفية للغسالة.
٣. بواسطة زوج من الزردية، اسحب المصفاة المشبكة إلى الخارج من طرف الخرطوم بلطف واشطفها بالماء حتى تصبح نظيفة. نظف كذلك الجزءين الداخلي والخارجي للوصلة.

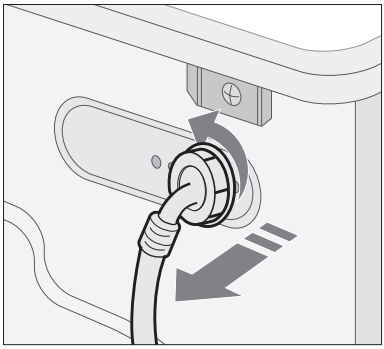

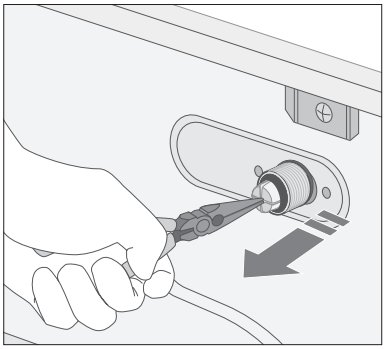

٤. أعد الدرج إلى مكانه.
٥. ثبت الخرطوم في الغسالة مرة أخرى.
٦. افتح صنبور الماء وتأكد من عدم ترسب الماء في التوصيلات.

WD7704C8S-02410U_AR.indd 3 4/17/2008 7:20:19 PM

المشاكل والحلول

الغسالة لا تعمل

- تأكد من إغلاق الباب بإحكام.
- تأكد من توصيل قابس الجهاز بمصدر التيار الكهربي.
- تأكد من فتح صنبور الماء.
- تأكد من الضغط على الزر تشغيل/إيقاف مؤقت.

لا يتم توريد الماء أو يتم توريد كمية غير كافية منه

- تأكد من فتح صنبور الماء.
- تأكد من أن خرطوم توريد الماء غير متجمد.
- تأكد من عدم انثناء خرطوم توريد الماء.
- تأكد أن المصفاة الموجودة في خرطوم توريد الماء غير مسدودة.

يبقى مسحوق الغسيل في الدرج بعد اكتمال برنامج الغسيل

- تأكد من تشغيل الغسالة بضغط ماء كاف.
- ضع مسحوق الغسيل في الأجزاء الداخلية لدرج مسحوق الغسيل (بعيداً عن الحواف الخارجية).

تهتز الغسالة أو تحدث صوتاً مرتفعاً

- تأكد من تركيب الغسالة على أرض مستوية. إذا كانت الأرض غير مستوية، اضبط قدم الغسالة لاستواء الجهاز.
- تأكد من إزالة مسامير الشحن.
- تأكد من عدم ملامسة الغسالة لأي شيء آخر.
- تأكد من توازن الملابس الموجودة في الغسالة.

لا يتم التصريف من الغسالة و/أو لا تقوم بعملية دوران

- تأكد من عدم تعرض خرطوم التصريف لضغط أو انثناء.
- تأكد أن المصفاة الشبكية في خرطوم الماء غير مسدودة.

يتعذر فتح الباب

١. افصل القابس من منفذ التيار الكهربي.
٢. أزل الماء من جهاز الغسالة.
٣. افتح غطاء المصفاة باستخدام قطعة معدنية.
٤. حدد مكان العلامة البلاستيك البرتقالية اللون واسحب لفتح الباب.

فهم رسائل الخطأ

الخطأ المعروض على الشاشة	الحل
dE2	• أغلق الباب.
4E	• تأكد من أن صنبور الماء مفتوح. • تأكد من ضغط الماء.
5E	• نظّف المصفاة من المخلفات. • تأكد من تركيب خرطوم التصريف تركيبًا صحيحًا.
UE	• وضع الملابس غير متوازن: فك أي تشابك بين الملابس. في حالة غسيل قطعة واحدة من الملابس، مثل برنس حمام أو الجينز، قد لا تكون نتيجة الدوران النهائي مرضية. وتظهر رسالة خطأ "UE" في إطار العرض.
cE / 3E	• اتصل بخدمة ما بعد البيع.
HOT	• يتم عرضها في حالة عدم فتح الباب بسبب درجة الحرارة العالية.

قبل الاتصال بمركز خدمة ما بعد البيع:

١. حاول حل المشكلة (راجع "استكشاف الأخطاء وإصلاحها" في هذه الصفحة).
٢. أعد تشغيل البرنامج لمعرفة ما إذا كان سيتكرر ظهور الخطأ مرة أخرى.
٣. إذا استمر الخطأ، اتصل بمركز خدمة ما بعد البيع واشرح المشكلة.

WD7704C8S-02410U_AR.indd 1 4/17/2008 7:20:19 PM

جدول البرامج

(*خيار المستخدم)

البرنامج	أقصيوزن (بالكجم)	مسحوق الغسيل والمواد الإضافية			درجة الحرارة (م)	سرعة الدوران (القصوى) لفة في الدقيقة		تأجيل التشغيل	دورة الغسيل (بالدقيقة)
	WD7704C8/ WD7702C8	الغسيل الأولي	غسيل	ملين القماش	القصوى	WD7704C8	WD7702C8		
قطن	٨,٥	*	نعم	*	٩٥	١٤٠٠	١٢٠٠	*	١٤٥
ملابس ملونة	٧,٥	*	نعم	*	٦٠	١٤٠٠	١٢٠٠	*	٩٧
اصطناعي	٤,٠	*	نعم	*	٦٠	١٢٠٠	١٢٠٠	*	٦٩
رقيق	٢,٥	-	نعم	*	٤٠	٨٠٠	٨٠٠	*	٥٢
صوف	٢,٠	-	نعم	*	٤٠	٨٠٠	٨٠٠	*	٣٩
غسيل يدوي	٢,٠	-	نعم	*	٤٠	٤٠٠	٤٠٠	*	٣١
سريع	٣,٠	-	نعم	*	٦٠	١٤٠٠	١٢٠٠	*	٢٧

البرنامج	نوع الغسيل
قطن	الملابس القطنية وأغطية السرير والمفارش الكتانية والملابس الداخلية والمناشف والقمصان الخ. متوسطة أو خفيفة الاتساخ.
ملابس ملونة	الملابس القطنية وأغطية السرير والمفارش الكتانية. والملابس الداخلية والمناشف والقمصان متوسطة أو خفيفة الاتساخ...الخ
اصطناعي	البلوزات والقمصان متوسطة أو خفيفة الاتساخ وغيرها من الملابس المصنوعة من البوليستر (الديولين والتريفيرا) ومادة البولياميد (البيرلون والنيلون) أو الأنسجة الصناعية الأخرى.
رقيق	الستائر والفساتين والتنورات والقمصان والبلوزات الرقيقة.
صوف	الملابس الصوفية القابلة للغسيل في جهاز الغسالة فقط والتي تحمل علامة الصوف الخالص الجديد.
سريع	الملابس القطنية خفيفة الاتساخ والبلوزات والقمصان الكتانية والملابس الوبرية الملونة الغامقة والملابس الكتانية الملونة الخامات الكتانية والغسيل اليدوي إلخ.

١. تم قياس بيانات مدد البرامج وفقاً للظروف المبينة في Standard IEC 60456 / EN 60456.
٢. قد يختلف الاستهلاك في كل منزل عن القيم المبينة في الجدول بسبب الاختلاف في ضغط الماء ودرجة حرارتها. وكمية الغسيل ونوعه.

WD7704C8S-02410U_AR.indd 1 4/17/2008 7:20:19 PM

جدول البرامج

(*خيار المستخدم)

البرنامج	أقصيوزن (بالكجم)	مسحوق الغسيل والمواد الإضافية			درجة الحرارة (م)	سرعة الدوران (القصوى) لفة في الدقيقة		تأجيل التشغيل	دورة الغسيل (بالدقيقة)
	WD7704C8/ WD7702C8	الغسيل الأولي	غسيل	ملين القماش	القصوى	WD7704C8	WD7702C8		
تنشيف	٣,٥	-	-	-	-	-	-	*	١٩٠
أوساخ كثيرة	٧,٥	*	نعم	*	٦٠	١٤٠٠	١٢٠٠	*	١٠٨
حمولة متنوعة	٢,٥	-	نعم	*	٦٠	٨٠٠	٨٠٠	*	٧٥
بطانيات	٥,٠	*	نعم	*	٩٥	١٤٠٠	١٢٠٠	*	٩٢

البرنامج	نوع الغسيل
أوساخ كثيرة	الملابس القطنية وأغطية السرير والمفارش الكتانية. والملابس الداخلية والمناشف والقمصان والغسيل اليدوي إلخ.
حمولة متنوعة	خليط من الملابس القطنية خفيفة الاتساخ والألياف الاصطناعية.
بطانيات	غطاء السرير القطني وملاءات السرير وأغطية اللحاف وأغطية الوسادة إلخ.

WD7704C8S-02410U_AR.indd 2 4/17/2008 7:20:20 PM

جدول العناية بالأقمشة

قماش مضاد	يمكن الكي عند ١٠٠°م بحد أقصى
قماش رقيق	يحظر الكي
يمكن الغسيل عند ٩٥°م	يمكن استخدام التنظيف الجاف باستخدام أي مذيبات
يمكن الغسيل عند ٦٠°م	التنظيف الجاف بالبروكلوريد أو الكحول النقي أو R113 فقط
يمكن الغسيل عند ٤٠°م	التنظيف الجاف بوقود الطائرات أو الكحول النقي أو R113 فقط
يمكن الغسيل عند ٣٠°م	يحظر استخدام التنظيف الجاف
يمكن غسل الملابس على اليد	تنشيف منبسط
التنظيف الجاف فقط	يمكن تعليقها للتنشيف
يمكن استخدام مادة تبييض مع الماء البارد	تنشيف الملابس وهي معلقة على شماعة
يحظر استخدام مادة تبييض	تنشيف بالتدوير، حرارة عادية
يمكن الكي عند ٢٠٠°م بحد أقصى	تنشيف بالتدوير، حرارة خفيفة
يمكن الكي عند ١٥٠°م بحد أقصى	يحظر تنشيفها بالتدوير

التنبيهات الكهربية

لتقليل احتمال التعرض لأخطار الحرائق والصدمات الكهربية وغيرها من الإصابات، ضع احتياطات السلامة التالية في الاعتبار:

- شغّل الجهاز فقط من نوع مصدر التيار الكهربي المشار إليه على الجهاز. إذا لم تكن متأكداً من نوع الطاقة الكهربائية في منزلك، استشر مورد الجهاز أو شركة الطاقة المحلية.
- استخدم مخرج التيار الذي تم توصيله الأرضي أو تقطيبه. من أجل سلامتك، تم تزويد هذا الجهاز بقابس تيار متردد متقطب ذو طرف أعرض من الآخر. يناسب هذا القابس منفذ التيار الكهربي باتجاه واحد فقط. إذا لم تستطع إدخال القابس بأكمله في منفذ التيار الكهربي، جرب إدخال القابس بشكل عكسي. إذا كان القابس غير ملائم لمنفذ التيار، اتصل بفني كهربائي لتبديل منفذ التيار.
- احم سلك التيار الكهربي. لا بد من وضع سلك التيار الكهربي بعيداً عن وطء الأقدام وتجنب وضع أية أجسام عليه أو فوقه. توخ المزيد من الحذر عند التعامل مع الأسلاك المتصلة بالقابس ومصدر التيار ونقطة خروج السلك من الجهاز.
- تجنب زيادة الضغط على منفذ التيار الكهربي أو الأسلاك الإضافية. يمكن أن ينتج عن التحميل الزائد حريقاً أو صدمة كهربية.

WD7704C8S-02410U_AR.indd 1 4/17/2008 7:20:22 PM

الملحق

حماية البيئة

- هذا الجهاز مصنوع من مواد قابلة لإعادة التدوير. إذا قررت التخلص من هذا الجهاز، يرجى مراعاة القوانين المحلية الخاصة بالتخلص من النفايات. اقطع سلك التيار بحيث لا يمكن توصيل الجهاز بمصدر التيار الكهربي. أزل الباب لمنع تعرض الحيوانات أو الأطفال الصغار للاحتباس داخل الجهاز.
- لا تضع مسحوق غسيل أكثر من الكمية المبينة في إرشادات الشركة المصنعة لمسحوق الغسيل.
- استخدم مواد إزالة البقع ومواد التبييض قبل دورة الغسيل عند الحاجة فقط.
- وفّر الماء والكهرباء من خلال غسيل أحمال ملابس كاملة فقط (تختلف الكمية وفقاً للبرنامج المستخدم).

إعلان التوافق

يتوافق هذا الجهاز مع مقاييس السلامة الأوروبية و EC directive 93/68 و EN Standard 60335.

المواصفات

النوع		جهاز غسالة أمامي الحمل	
الأبعاد (عرض × عمق × ارتفاع)		WD7704C8/WD7702C8	
		٨٤٤مم×٦٠٠مم×٥٩٨مم	
ضغط الماء		٥٠ كيلوباسكال ~ ٨٠٠ كيلوباسكال	
كمية الماء		٦٠ ليتر	
الوزن الصافي		WD7704C8/WD7702C8	
		٨٢ كيلو	
سعة الغسيل والتنشيف	الغسيل	٨,٥ كجم (ملابس جافة)	
	التنشيف	٣,٥ كجم (ملابس جافة)	
استهلاك الطاقة	الطراز	WD7704C8/WD7702C8	
	الغسيل	٢٣٠ فولت	١٥٠ وات
	الغسيل والتسخين	٢٢٠ فولت	٢٠٠٠ وات
		٢٤٠ فولت	٢٤٠٠ وات
	التنشيف	٢٢٠ فولت	٢٠٠٠ وات
		٢٤٠ فولت	٢٤٠٠ وات
	الضخ	٣٤ وات	
دورة الدوران	الطراز	WD7704C8/WD7702C8	
وزن الصندوق	غلاف ورقي	٢,٥ كجم	
	غلاف بلاستيكي	١,٠ كجم	
الحمولة	الطراز	WD7704C8	WD7702C8
	لفة في الدقيقة	١٤٠٠	١٢٠٠

WD7704C8S-02410U_AR.indd 2 4/17/2008 7:20:23 PM

اتصل بـ SAMSUNG WORLD WIDE

في حالة وجود أي استفسارات أو تعليقات حول منتجات سامسوخ. الرجاء الاتصال بمركز خدمة عملاء سامسوخ.